

"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products.
WALKMAN is a trademark of Sony Corporation.

Cassette Player

Operating Instructions

使用说明书


사용설명서




WM-EX921

©2001 Sony Corporation Printed in China



A

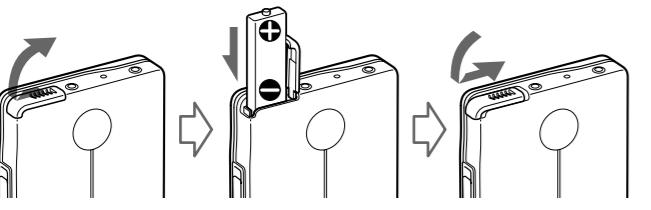

B

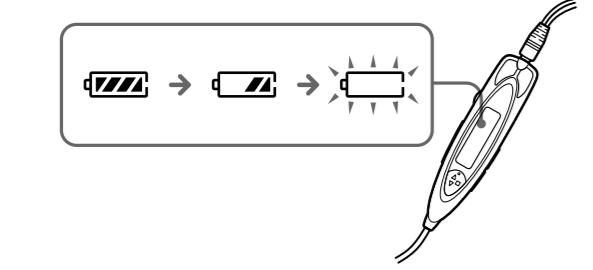

C

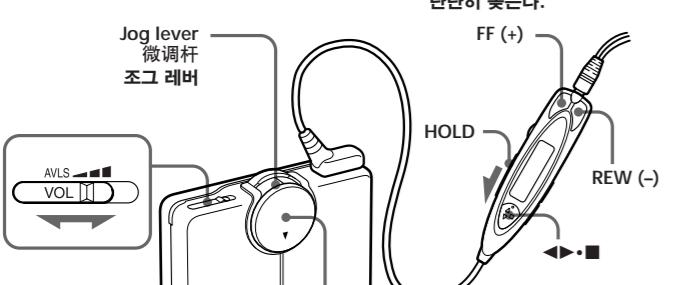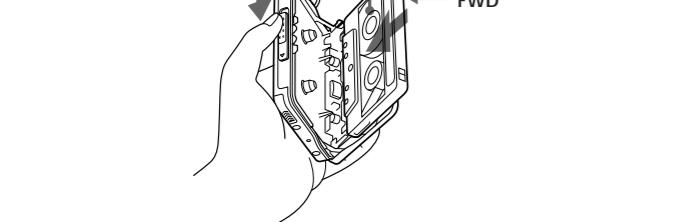

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

- To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Treat batteries as toxic waste. Do not dispose with regular garbage.

Preparations

Rechargeable Battery A

1 Insert the supplied rechargeable battery NH-14WM (A) into the rechargeable battery compartment with correct polarity.

2 Connect the supplied AC power adaptor to the charging stand, plug in the AC power adaptor to the house current (mains).

3 Place the main unit on the charging stand. The CHARGE lamp will light up. About 30 minutes of charging will charge the battery to last about 3 hours. Full charging takes about 6 hours. The CHARGE lamp will go off when charging is complete.

Note

- Do not use the unit while charging. Remove the unit from the charging stand when using it.
- If you operate the unit while charging, the battery will not be charged.
- If you operate the unit while charging, it may cause malfunction.
- Do not place the unit on the charging stand without the rechargeable battery. Otherwise, it may cause malfunction.

Note on the AC power adaptor

Use only the supplied AC power adaptor. Do not use any other AC power adaptor.



When to charge the battery B

Charge the battery when "□" flashes in the display.

Note

- After the battery is replaced, the setting of the SOUND and MODE buttons will be erased.

Playing a Tape C

1 Insert a cassette and if the HOLD function of the remote control is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.

2 Press ▲(play)•■(stop) on the remote control* and adjust the volume with VOL.

Notes on volume control

- The VOL switch on the main unit** has three steps. Generally, set it to the center and make fine volume adjustments on the remote control. Set it to the maximum when the recording level is low. If set to AVLS (minimum), AVLS is activated (see "Protecting Your Hearing—AVLS").
- The sound cannot be turned down all the way.

- The ▲•■ button on the remote control has a tactile dot.
- There is a tactile dot beside the VOL switch on the main unit to show the direction to turn up the volume.

Note on the cassette holder

When opening the cassette holder, make sure the tape is stopped, then slide the OPEN switch. If the cassette holder is opened when the tape is running, the tape may loosen and be damaged.

To

Press

Switch playback to the other side ▲•■ for more than a second during playback

Stop playback ▲•■ once during playback

Fast forward* FF during stop

Rewind* REW during stop

Play the other side from the beginning (Skip Reverse function) FF for 2 seconds or more during stop

Play the same side from the beginning (Rewind Auto Play function) REW for 2 seconds or more during stop

* If ▲•■ on the remote control is pressed during fast forward or rewind, the Walkman switches to playback.

Operation on the main unit

You can operate the tape with the jog lever on the main unit. If the jog lever is hidden (i.e., on hold), slide hold shutter in the direction of "▼" to release hold.

To

Jog lever

Play back Press once.

Switch playback to the other side Press for more than a second during playback.

Stop playback Press once.

Fast forward* Move toward → FF once during stop.

Rewind* Move toward ← REW once during stop.

Play the other side from the beginning (Skip Reverse function) Move and hold toward → FF for 2 seconds or more during stop.

Play the same side from the beginning (Rewind Auto Play function) Move and hold toward ← REW for 2 seconds or more during stop.

* If the jog lever on the main unit is pressed during fast forward or rewind, the Walkman switches to playback.

中文

警告

为防火灾或触电危险, 切勿让机器暴露于雨中或潮湿处。

別把装置安装在例如书橱或壁橱等密不通风的地方。

- 为防止火灾, 注意别让报纸、桌巾、窗帘等盖住装置的通风孔。也不把可点燃的蜡烛放在装置上。
- 为防火灾或触电的危险, 请别将装满液体的, 例如花瓶等放在装置上面。
- 电池当有毒垃圾处理, 不可当普通垃圾丢弃。

准备工作

充电池 A

1 以正确极性将附带的充电池 NH-14WM (A) 装入充电器。

2 将附带的 AC 电源转接器连接到充电器架, 将 AC 电源转接器插接到家庭用电源插座 (主电源)。如果插座不适合电源插座, 请将附带的 AC 插头转接器 ("Sony 世界型号" 为限)。

3 把主机放在充电架上。

CHARGE 灯将点亮。

大约 30 分钟的充电, 可使电池维持大约 3 小时。完全充电时大约 6 小时。

当完成充电时, CHARGE 灯即将熄灭。

要从开头播放下一曲 / 接下 9 首曲子时 (AMS*)

遥控器上: 播放中按一次 / 复反按 FF。

主机上: 播放中向 → FF 移动一次 / 复反移动微调杆。

* 快进绕或重绕中, 如果按了主机上的微调杆, Walkman 即将切换为放音模式。

要从开头放现在播放中曲子 / 前面 8 首曲子时 (AMS*)

遥控器上: 播放中按一次 / 复反按 REW。

主机上: 播放中向 ← REW 移动一次 / 复反移动微调杆。

* 自动乐曲探测

反复现在曲子 (反复单曲功能)

遥控器上: 播放中按两次 ▲•■ ("REP" 点亮)。

主机上: 播放中按两次微调杆。

要停止单曲反复时

请按一次 ▲•■ 或微调杆。

听着声音快进绕 / 重绕 (CUE/REVIEW)

遥控器上: 播放中按住 FF/REW 而在所要放音点处释放它。

主机上: 播放中向 → FF / ← REW 移动并保持住微调杆而在所要放音点处释放它。

遥控器上: 播放中按两次 ▲•■ 或微调杆。

何时给电池充电 B

当显示窗闪烁着 "□" 时, 即请给电池充电。

注

- 接装电池之后, SOUND 和 MODE 的按钮设定都将被抹去。

To stop a single repeat

Press ▲•■ 或 the jog lever once.

Fast forward/rewind while listening to the sound (CUE/REVIEW)

On the remote control: Press and hold FF/REW during playback ("REP" lights up).

On the main unit: Move the jog lever toward → FF / ← REW during playback and release it at the point you want.

Note

- After the battery is replaced, the setting of the SOUND and MODE buttons will be erased.

Playing a Tape C

1 装入盒带, 如果遥控器的 HOLD 功能仍打开着, 即请沿相反于箭头方向滑动 HOLD 开关以释放控制器。

2 在遥控器上按 ▲ (放音) •■ (停止) 并用 VOL 旋钮调节音量。

音量控制须知

• 主机上 ** VOL 开关分三段。

通常把它设定于中央的一段而在遥控器上微调音量。当录音电平低时, 可设定于最大的位置, 如果设定于 AVLS (最小), AVLS 即被激活。(参看 "保护您的听力—AVLS")。

• 声音完全不能调小。

* 遥控器上的 ▲•■ 按钮带有触感圆点。

** 在主机上 VOL 旁边有一个触感圆点, 表示转大音量的方向。

盒带架须知

当操作盒带架时, 一定要先停掉磁带, 然后滑动 OPEN 开关。

如果在磁带正在旋转中打开盒带架, 磁带很可能变松懈而发生故障。

要

请按

换播放另一面 播放中按 ▲•■ 1 秒钟以上

停止播放 播放中按一次 ▲•■

快进绕 * 停止中按 FF

重绕 * 停止中按 REW

从头播放另一面 停止中按 FF 2 秒钟以上

(跳越倒绕功能)

从头播放同一面 停止中按 REW 2 秒钟以上

(重绕自动播放功能)

* 如果在快进绕或重绕过程中按了遥控器上的 ▲•■, Walkman 将转换为放音。

音量调整须知

- 本机上的 VOL 开关有 3 个阶段式地进行调节。

通常把它设定于中央的一段而在遥控器上微调音量。当录音电平低时, 可设定于最大的位置, 如果设定于 AVLS (最小), AVLS 即被激活。(参看 "保护您的听力—AVLS")。

• 音量完全不能调小。

* 遥控器上的 ▲•■ 按钮带有触感圆点。


** 在主机上 VOL 旁边有一个触感圆点, 表示转大音量的方向。

• 遥控器上的 ▲•■ 按钮是聋人可用的。

• 本机上的 VOL 开关旁有一个触感圆点, 表示转大音量的方向。

• 本机上的 VOL 开

D

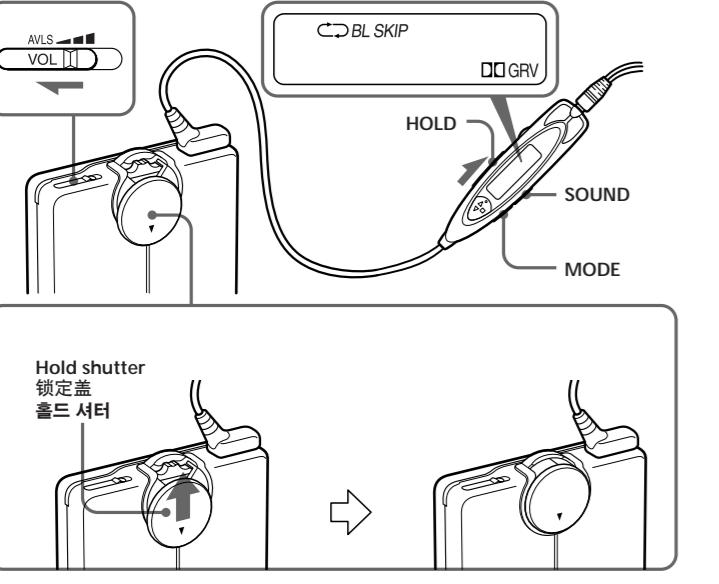

Specifications

Frequency response (Dolby NR off)
Playback: 30 - 18 000 Hz

Output
Headphones (G jack)
Load impedance: 300 Ω

Power requirements

- One rechargeable battery (1.2 V DC × 1)
- For charging stand (DC IN 4.5 V jack)
- AC power adaptor

Dimensions (w/h/d)
Approx. 77.1 × 108.8 × 20.2 mm

Mass
Approx. 147 g

Supplied accessories

- Stereo headphones or earphones with remote control (1)
- Battery charging stand (1)
- AC power adaptor (1)
- Rechargeable battery (NH-14WM) (A), 1.2 V, 1 350 mAh (MIN, Ni-MH) (1)
- Rechargeable battery carrying case (1)
- Carrying pouch (1)

Design and specifications subject to change without notice.

Battery life (Approx. hours) (in playback) (JEITA*)
Rechargeable NH-14WM (A) 45
fully charged

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association). (Using a Sony HF series cassette tape)

Note

- The battery life may be shorter depending on the operating condition and the surrounding temperature.

Frequency response (杜比减噪系统关掉)
放音: 30 - 18 000 Hz

输出
头戴耳机 (G 插孔)
负载阻抗 8 - 300 Ω

电源

- 一个充电式电池: 1.2 V DC × 1
- 额定电压: 20 mA-50mA, 1.2 V DC (磁带播放状态)
用于充电座 (DC IN 4.5 V 插孔)
- AC 电源转接器: 220 V, 50 Hz (中国型号)
额定电压: 500 mA, 4.5 V DC

尺寸 (宽/高/纵深)
约 77.1 × 108.8 × 20.2 mm

质量
约 147 g

附件
带遥控器的立体声头戴耳机或耳机 (1)
电池充电器 (1)
AC 电源转接器 AC-E455 (1)
充电池(NH-14WM) (A), 1.2 V, 1 350 mAh (MIN, Ni-MH) (1)
电池携带盒 (1)
携带软袋 (1)

设计和规格有所变更时,恕不另行通知。

주요 재원

주파수 응답 특성(Dolby NR off)
재생: 30 - 18 000 Hz

출력

헤드폰 (G 쪽)
부하 임피던스 8 - 300 Ω

필요 전원

- 충전식 배터리: 1.2 V DC × 1
- 충전 스트랩(ing) (DC IN 4.5 V 쪽)
- AC 전원 어댑터

치수(w/h/d)
약 77.1 × 108.8 × 20.2 mm

중량
약 147 g

부속 액세서리
스테레오 헤드폰 또는 리모컨부착 이어폰 (1)
배터리 충전 스트랩 (1)
AC 전원 어댑터 (1)
충전식 배터리
(NH-14WM) (A), 1.2 V, 1 350 mAh(MIN, Ni-MH) (1)
휴대용 차우저 (1)

설계 및 제작은 사전 통보없이 변경될 수 있습니다.

배터리 지속시간(약 시간) (재생)
완전 충전한 충전식 NH-14WM (A) 45

배터리 지속시간(약 시간) (재생) (JEITA*)
완전 충전한 충전식 NH-14WM (A) 45

* JEITA (Japan Electronics and Information Technology Industries Association) '본전지정보기기준'에 따라 측정한 값(Sony HF 시리즈 테이프 사용).

주의

- 사용상태, 주위의 온도에 따라서 배터리의 지속시간이 짧아지는 경우가 있습니다.

Locking the Controls — HOLD Function

On the remote control, slide the HOLD switch in the direction of the arrow to lock the controls.

On the main unit, close the hold shutter so that the jog lever becomes hidden.

Precautions

On charging

- Remove the AC power adaptor from the wall outlet as soon as possible after the rechargeable battery has been charged. Overcharging may damage the rechargeable battery.
- The charging stand and the rechargeable battery may become warm during charging, but this is not a problem.
- Do not tear off the film on the rechargeable battery.
- Use only the supplied charging stand to charge the supplied rechargeable battery.
- Be sure not to short-circuit the battery. When you carry it with you, use the supplied carrying case. If you are not using the case, do not carry the battery with other metallic objects such as keys, rings in your pocket.
- If the rechargeable battery is new or has not been used for a long time, it may not be charged completely until you use it several times.

On handling

- Do not drop the unit or give a shock to the unit, or it may cause a malfunction.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- The LCD display may become hard to see or slow down when using the unit at high temperatures (above 40°C/104°F) or at low temperatures (below 0°C/32°F). At room temperature, the display will return to its normal operating condition.
- We do not recommend the use of tape longer than 90 minutes. They are very thin and tend to stretch easily. This may cause malfunction of the unit or sound deterioration.
- If the unit has not been used for a long period of time, set it in the playback mode to warm it up for a few minutes before you start using again.

설계 및 제작은 사전 통보없이 변경될 수 있습니다.


English

Using Other Functions

Adjusting Playback Mode D

You can adjust the playback direction mode (→ or ←) or the BL SKIP mode (on or off).

Press MODE repeatedly. With each press the indications change as follows:

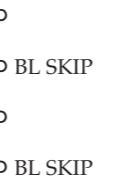

- When "BL SKIP" is displayed, the tape is fast-forwarded to the next track if there is a blank space of longer than 12 seconds. You will hear repeated sets of three short beeps when skipping a blank.
- When "→" is displayed, both sides of the tape is played repeatedly.
- When "←" is displayed, both sides of the tape is played once (if you start from R (REV) side, only REV side will be played).

Note

- You cannot adjust the playback mode during fast-forward or rewind.

Playing a Tape Recorded with the Dolby® B NR System D

Hold down SOUND until "□" appears in the display.

To cancel Dolby B NR, hold down SOUND again until "□" disappears.

* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Note
* You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

Emphasizing Sound D

Press SOUND repeatedly. With each press, the indications change as follows:

- RV (Sound Revitalizer): emphasizes treble sound
MB (Mega Bass): emphasizes bass sound (moderate effect)
- GRV (Groove): emphasizes bass sound (strong effect)
none: normal (no effect)

Notes

- If the sound is distorted with the mode "GRV", turn down the volume of the main unit or select other modes.
- You cannot change the mode during fast-forward or rewind.

Protecting Your Hearing — AVLS (Automatic Volume Limiter System) D

Set the VOL switch on the main unit to AVLS.

To cancel the AVLS function

Set the VOL switch of the main unit to the center or maximum.

Locking the Controls — HOLD Function

On the remote control, slide the HOLD switch in the direction of the arrow to lock the controls.

On the main unit, close the hold shutter so that the jog lever becomes hidden.

Precautions

On charging

- Remove the AC power adaptor from the wall outlet as soon as possible after the rechargeable battery has been charged. Overcharging may damage the rechargeable battery.
- The charging stand and the rechargeable battery may become warm during charging, but this is not a problem.
- Do not tear off the film on the rechargeable battery.
- Use only the supplied charging stand to charge the supplied rechargeable battery.
- Be sure not to short-circuit the battery. When you carry it with you, use the supplied carrying case. If you are not using the case, do not carry the battery with other metallic objects such as keys, rings in your pocket.
- If the rechargeable battery is new or has not been used for a long time, it may not be charged completely until you use it several times.

On handling

- Do not drop the unit or give a shock to the unit, or it may cause a malfunction.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- The LCD display may become hard to see or slow down when using the unit at high temperatures (above 40°C/104°F) or at low temperatures (below 0°C/32°F). At room temperature, the display will return to its normal operating condition.
- We do not recommend the use of tape longer than 90 minutes. They are very thin and tend to stretch easily. This may cause malfunction of the unit or sound deterioration.
- If the unit has not been used for a long period of time, set it in the playback mode to warm it up for a few minutes before you start using again.

On the remote control

Use the supplied remote control only with this unit.

On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume to a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

On maintenance

- Clean the tape head and tape path, using a cotton swab and commercially available cleaning solvent after every 10 hours of use.
- To clean the exterior, use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.
- Clean the headphones/earphones and remote control plugs periodically.

Troubleshooting

The tape fast forwards by itself during playback.

• BL SKIP is activated. Deactivate BL SKIP.

• Charge the rechargeable battery.

• Hold down SOUND until "□" appears in the display.

• Charge the rechargeable battery.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

• Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories