

有源扬声器系统

Active Speaker System

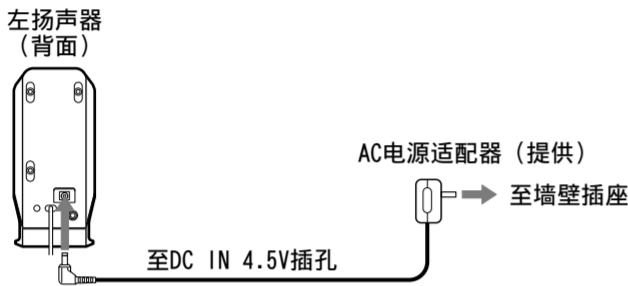 
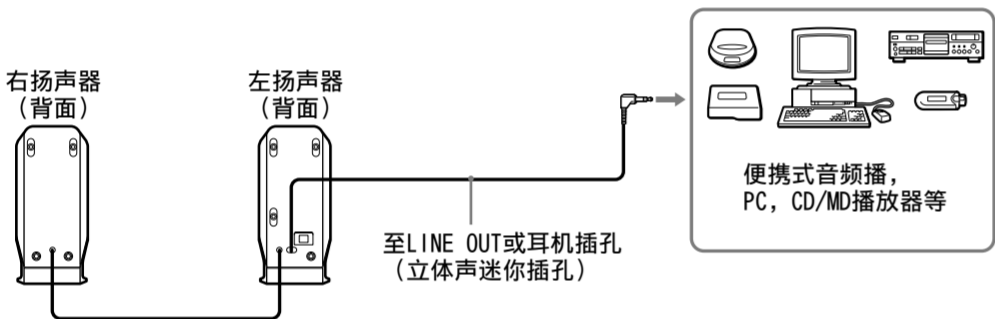 
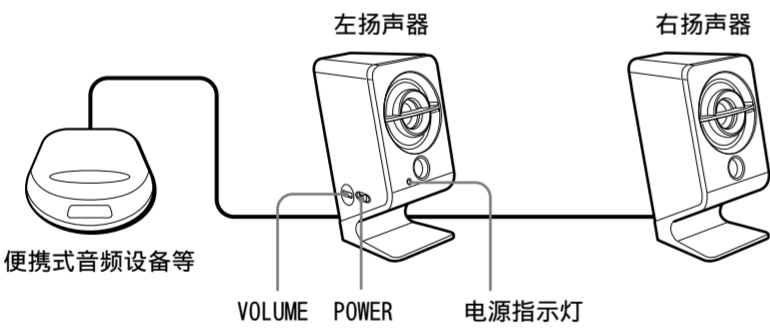 


SRS-A201

©2010 索尼公司 中国印刷
Sony Corporation Printed in China

使用说明书

Operating Instructions

**A****B****C**

产品中有毒有害物质或元素的名称及含量

使用环境条件: 5度~35度 (○: 不含有, ×: 含有)

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
内置线路板	×	○	○	○	○	○
外壳	×	○	○	○	○	○
扬声器	×	○	○	○	○	○
附件	×	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

出版日期: 2010 年 7 月

简体中文

针对中国客户

操作本设备前, 请通读本说明书并保留以备将来参考。

警告

为了避免火灾或触电, 切勿让本设备与雨水接触或受潮。
为了避免触电, 切勿打开机壳。维修必须由合格的技术人员进行。
为了避免火灾发生, 切勿用报纸、桌布、窗帘等盖住设备通风孔。切勿将点燃的蜡烛放在设备上。
为了避免火灾或触电, 切勿将花瓶等装有液体的物品放在设备上。

切勿将设备安装在书橱或内置式壁橱等封闭空间内。

将交流电源适配器连接至便于插拔的交流电源插座。一旦发现交流电源适配器有异常情况, 请立即断开与交流电源插座的连接。

注意

请注意, 任何本说明书未明确表述的改变或改装可能会造成您无法操作本设备。

注意事项

关于安全

- 标示工作电压、功耗等项目的铭牌位于底表面。
- 操作系统前, 务必确认系统的工作电压与您当地的电源是否一致。

购买地	工作电压
中国	220V AC, 50Hz

- 只能使用提供的AC电源适配器。
- 用交流电源适配器供电操作系统后, 如果长时间不使用系统, 请将交流电源适配器从墙壁插座中拔出。仅仅切换左扬声器的POWER开关不会关闭交流电源适配器。

关于放置

- 切勿将扬声器放置在倾斜位置。
- 切勿将系统放在热源附近, 也不要放在会受到阳光直射、大量灰尘、潮湿、雨水或者会受到机械震动的地方。

关于操作

- 切勿打开机壳。维修必须由合格的技术人员进行。
- 如果固体或液体掉入系统, 应让合格的技术人员检查系统后才能继续使用。
- 虽然本系统为磁屏蔽, 不过也切勿将录制过的磁带、手表、个人信用卡或带有磁性编码的软盘长时间放在系统前面。

关于清洁

切勿使用酒精、汽油或稀释剂清洁机壳。

如果您对您的扬声器系统有疑问或发现问题, 请与最近的Sony经销商联系。

如果电视机图像或显示器画面出现磁性失真

 
虽然本系统为磁屏蔽, 有些电视机/个人计算机有时也可能会出现磁性失真。此时, 请关闭电视机/个人计算机电源, 15到30分钟后再重新打开。对于个人计算机, 请在关闭前采取数据保存等相应措施。如果情况没有改善, 请将本机远离电视机/个人计算机放置。另外, 切勿将内部安装或使用磁铁的物体放在电视机/个人计算机附近, 例如音响架、电视机底座、玩具等。这些物体与系统会交互作用, 因此可能会对图像造成磁性失真。

如果您对本系统有本说明书未提及的疑问或问题, 请与最近的Sony经销商联系。

连接扬声器

- 将交流AC电源适配器连接到扬声器。(见图 **A**)

关于交流电源适配器的说明
只能使用提供的AC电源适配器。切勿使用其他交流电源适配器以免损坏扬声器。



- 连接或拔掉交流电源适配器以前, 请关闭系统。否则可能会引起故障。

- 将左扬声器连接到源设备。(见图 **B**)

聆听声音 (见图 **C**)

首先, 调低左扬声器的音量。将扬声器连接到耳机输出端以前, 请调低所连设备的音量。

- 将POWER开关设定至ON。电源指示灯亮起。

- 调节VOLUME控制器。

当连接到耳机输出端时, 也请调节所连设备的音量。聆听后, 请将POWER开关设定为“OFF”。电源指示灯熄灭。

注意

如果音源设备有低音增强功能或均衡器功能, 请设定为关闭。如果这些功能开启, 声音可能失真。

注意

如果将扬声器连接到带有内置收音机或调谐器的设备, 则收音机广播可能无法接收或灵敏度可能会大大降低。

故障排除

如果您的扬声器系统出现问题, 请查看下表并根据建议采取措施。如果问题依然存在, 请与最近的Sony经销商联系。

扬声器系统没有声音。

- 确保所有连接正确无误。
- 确保左扬声器以及所连设备的音量适当地调高。

声音失真。

- 调低所连设备的音量。或者, 如果所连设备有低音增强功能, 请将其关闭。
- 转动本设备上的VOLUME降低音量。

扬声器输出有嗡嗡声或噪音。

- 确保所有连接正确无误。
- 确保所有的音频设备不要放得距电视机过近。

声音突然中断。

- 确保所有连接正确无误。

电源指示灯的亮度不稳定。

电源指示灯的亮度可能在调高音量时变得不稳定。这不是故障。

规格

扬声器部分

封闭式	全音域, 低音反射, 磁屏蔽
扬声器系统	57mm (直径)
阻抗	8Ω
额定输入功率	1W

放大器部分 (左扬声器)

额定输出	1W+1W (10%T.H.D., 1kHz, 8Ω)
输入	输入线L型立体声迷你插头 (2 m) × 1
输入阻抗	4.7 kΩ (1 kHz时)

一般

电源	DC 4.5 V (提供的AC电源适配器)
尺寸 (宽/高/深)	约71 × 141 × 91 mm
质量	左: 205g, 右: 190g

随机配件

AC电源适配器 (AC-ES455K) (1)
使用说明书 (1)

设计和规格若有变更, 恕不另行通知。

关于售后服务的提示:

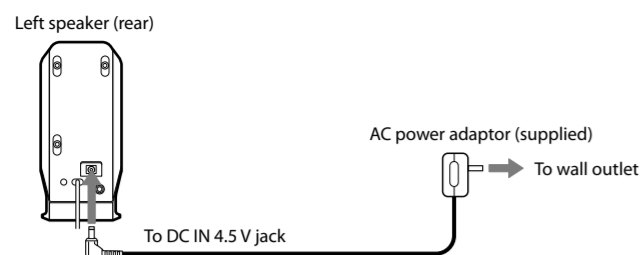 
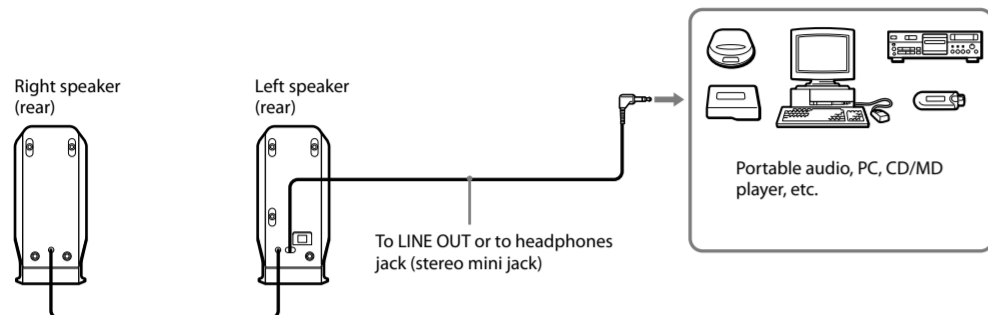 
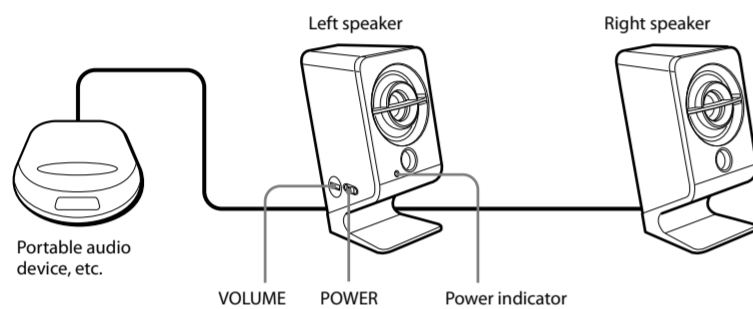 
在产品主机出现性能故障需修理时, 索尼公司有权视情况单方决定仅为用户提供更换式修理服务, 即直接通过为用户更换质量合格的产品的的方式进行修理, 而不再采取其他修理方式。

仅对于中国市场:

制造商: 索尼公司
地址: 日本国东京都港区港南1-7-1

总经销商: 索尼(中国)有限公司
地址: 北京市朝阳区东三环北路霞光里18号佳程大厦A座25层

原产地: 中国

A**B****C**

English

Before operating the unit, please read this manual thoroughly and retain it for future reference.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
To reduce the risk of electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.
To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.
To reduce the risk of fire or electric shock, do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Connect the AC power adaptor to an easily accessible AC outlet.
Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.

CAUTION

You are cautioned that any changes or modification not expressly approved in this manual could void your authority to operate this equipment.

Precautions

On safety

- The nameplate indicating operating voltage, power consumption, etc., is located on the bottom exterior.
- Before operating the system, be sure that the operating voltage of the system is identical with that of your local power supply.

Where purchased	Operating voltage
China	220 V AC, 50 Hz

- Use only the supplied AC power adaptor.
- After operating the system with the AC power adaptor, disconnect the AC power adaptor from the wall outlet if the system is not to be used for an extended period of time. Just switching the POWER switch on the left speaker does not turn the AC power adaptor off.

On placement

- Do not set the speaker in an inclined position.
- Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.

On operation

- Do not open the cabinet. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the system, have the system checked by qualified personnel before operating it any further.
- Although this system is magnetically shielded, do not leave recorded tapes, watches, personal credit cards, or floppy disks with magnetic coding in front of the system for an extended period of time.

On cleaning

Do not use alcohol, benzine, or thinner to clean the cabinet.

If you have any questions or problems concerning your speaker system, please consult your nearest Sony dealer.

If the TV picture or monitor display is magnetically distorted

Although this system is magnetically shielded, there may be cases that the picture on some TV sets/personal computer sets may become magnetically distorted. In such a case, turn off the power of the TV set/personal computer set once, and after 15 to 30 minutes turn it on again. For the personal computer set, take the appropriate measures such as data storage before turning it off.

When there seems to be no improvement. locate the system further away from the TV set/personal computer set. Furthermore, be sure not to place objects in which magnets are attached or used near the TV set/personal computer set, such as audio racks, TV stands, toys etc. These may cause magnetic distortion to the picture due to their interaction with the system.

If you have any questions or problems concerning your system that are not covered in this manual, please consult your nearest Sony dealer.

Hooking up the speakers

- 1 Connect the AC power adaptor to the speaker. (See fig. A)**

Notes on the AC power adaptor

- Use only the supplied AC power adaptor. Do not use any other AC power adaptor to avoid damaging the speaker.



- Before connecting or disconnecting the AC power adaptor, turn off the system. Otherwise, it may cause a malfunction.

- 2 Connect the left speaker to the source equipment. (See fig. B)**

Listening to the sound (See fig. C)

First, turn down the volume on the left speaker. Before connecting the speakers to the headphone output, reduce the volume of the connected component.

- 1 Set the POWER switch to "ON."**

The Power indicator lights up.

- 2 Adjust the VOLUME control.**

When connecting to the headphone output, also adjust the volume of the connected component.
After listening, set the POWER switch to the "OFF".
The Power indicator goes off.

Note

If the source device has a bass boost function or equalizer function, set to off. If these functions are on, sound may be distorted.

Note

If connecting the speaker to a device with a built-in radio or tuner, radio reception may not occur or sensitivity may be reduced significantly.

Troubleshooting

Should you encounter a problem with your speaker system, check the following list and take the suggested measures. If the problem persists, consult your nearest Sony dealer.

There is no sound from the speaker system.

- Make sure all the connections have been correctly made.
- Make sure the volume on the left speaker and the connected component have been turned up properly.

The sound is distorted.

- Turn down the volume level on the connected component. Or, if the connected component has the bass boost function, set it to off.
- Rotate VOLUME on this unit to reduce the volume.

There is hum or noise in the speaker output.

- Make sure all the connections have been correctly made.
- Make sure none of the audio components are positioned too close to the TV set.

The sound has suddenly stopped.

Make sure all the connections have been correctly made.

The brightness of the Power indicator is unstable.

The brightness of the Power indicator may become unstable when the volume is turned up. This is not malfunction.

Specifications

Speaker section

Enclosure type Full range, Bass reflex, magnetically shielded

Speaker system 57 mm (diameter)

Impedance 8 Ω

Rated input power 1 W

Amplifier section (Left Speaker)

Rated output 1 W + 1 W

(10 % T.H.D., 1 kHz, 8 Ω)

Input Input cord a L type stereo-mini plug (2 m) × 1

4.7 kΩ (at 1 kHz)

Input impedance

General

Power DC 4.5V (supplied AC power adaptor)

Dimensions (w/h/d) Approx. 71 × 141 × 91 mm

(2 7/8 × 5 5/8 × 3 5/8 inch)

Mass (Left) 205 g (7.24 oz.),

(Right) 190 g (6.71 oz.)

Supplied accessories

AC power adaptor (AC-ES455K) (1)

Operating Instructions (1)

Design and specifications are subject to change without notice.