



Printed using VOC (Volatile Organic Compound)-free vegetable oil based ink.

Cassette Player

Operating Instructions

使用說明書 (反面)

()

http://www.sony.net/

"WALKMAN" is a trademark of Sony Corporation.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

 
CE 標誌的有效性，僅限於那些有法律限制的國家，主要在 EEA (歐洲經濟區) 國家。

CE EEA ()



WM-EX527

Sony Corporation ©2002 Printed in Malaysia

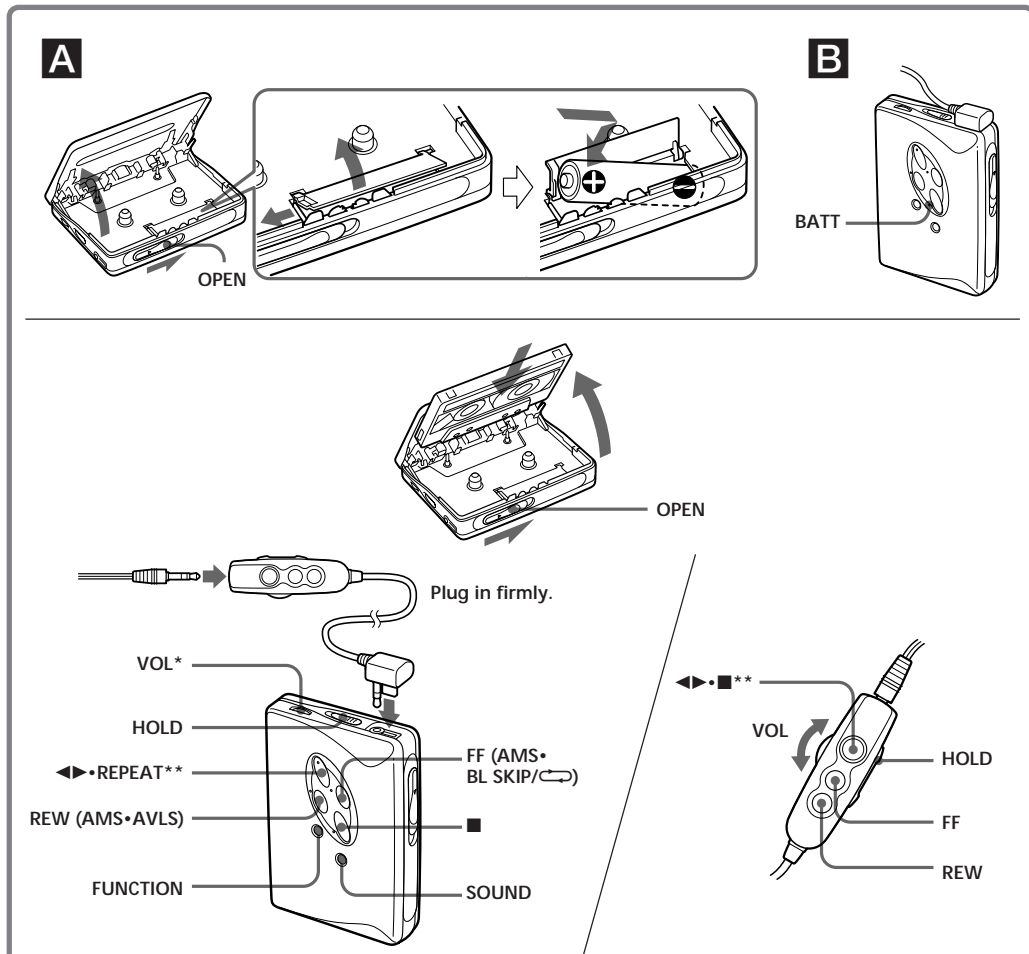

* There is a tactile dot beside VOL on the main unit to show the direction to turn up the volume.
 ** The button has a tactile dot.

Specifications

- Frequency response Playback: 30 - 18 000 Hz
- Output Headphones () jack Load impedance 8 - 300 Ω
- Power requirements 1.5 V One R6 (size AA) battery
- Dimensions (w/h/d) Approx. 78.1 x 108.0 x 28.1 mm (excluding projecting parts and controls)
- Mass Approx. 161 g (main unit only)
- Supplied accessories Stereo headphones or earphones with remote control (1)

Design and specifications are subject to change without notice.

規格

- 頻率範圍 放音：30 - 18 000Hz
 - 輸出 頭戴耳機 () 插孔 負載阻抗 8 - 300
 - 電源 1.5 V 使用一個 R6 (AA, 3號) 電池
 - 尺寸 大約 78.1 x 108.0 x 28.1mm (寬 / 高 / 縱深) (不含突起部份和控制器)
 - 質量 約 161g (僅限於主機)
 - 附件 立體聲頭戴耳機或耳機 (帶遙控器) (1)
- 設計和規格有所變更時，恕不另行奉告。

Battery life* (Approx. hours)	
	Sony alkaline LR6 (SG)**
Tape playback	35

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association) (Using a Sony HF series cassette tape).
 ** When using a Sony LR6 (SG) "STAMINA" alkaline dry battery (produced in Japan).

Note

- The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.

電池壽命* (近似小時數)	
	Sony 鹼電池 LR6 (SG) **
磁帶放音	35

* 按 JEITA (Japan Electronics and Information Technology Industries Association) 標準測定的值 (使用 Sony 牌 HF 系列錄音帶)。
 ** 使用 LR6 (SG) 型 Sony "STAMINA" 鹼電池 (日本製) 時。

註

- 電池壽命，可能因操作條件，環境溫度和電池型式而縮短些。

* ()	
	Sony LR6 (SG)**
	35

* JEITA (Japan Electronics and Information Technology Industries Association) (Sony HF ()).
 ** LR6 (SG) Sony STAMINA ()

English

Preparations

To Insert battery A

- 1 Slide the OPEN switch to open the cassette holder.
- 2 Release the catch to open the battery compartment lid, and insert one R6 (size AA) dry battery with correct polarity.

Note

- For maximum performance we recommend that you use a Sony alkaline battery.

When to replace the battery B

Replace the battery with a new one when the BATT lamp goes out.

Note

- After the battery is replaced, the settings of the FUNCTION and SOUND buttons will be erased.

Playing a Tape

- 1 If the HOLD function is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.
- 2 Insert a cassette and press ◀▶•REPEAT on the main unit, or if using the remote control, press ◀▶ (play) •■ (stop). Adjust the volume with VOL.

When adjusting the volume on the main unit
 Set the VOL control on the remote control at maximum.

When adjusting the volume on the remote control
 Set the VOL control on the main unit slightly above the appropriate level.

Operation on the main unit

To	Press
Switch playback to the other side	◀▶•REPEAT during playback
Stop playback	■
Fast forward*	FF during stop
Rewind*	REW during stop
Repeat the current track (Repeat Single Track function)	◀▶•REPEAT one second or more during playback To stop a single repeat, press it again.

Operation on the remote control

To	Press
Switch playback to the other side	◀▶•■ one second or more during playback
Stop playback	◀▶•■ once during playback
Fast forward*	FF during stop
Rewind*	REW during stop
Repeat the current track (Repeat Single Track function)	◀▶•■ twice during playback To stop a single repeat, press ◀▶•■ once.

Other Tape Operations

To	Press
Play the next track/succeeding 9 tracks from the beginning (AMS**)	FF once/repeatedly during playback
Play the current track/previous 8 tracks from the beginning (AMS**)	REW once/repeatedly during playback
Play the other side from the beginning (Skip Reverse function)	FF one second or more during stop
Play the same side from the beginning (Rewind Auto Play function)	REW one second or more during stop

* If ◀▶•■ on the remote control is pressed during fast forward or rewind, the Walkman switches to playback.
 ** Automatic Music Sensor

Using Other Functions

Adjusting playback mode

While holding down FUNCTION, press the FF button. The BL SKIP/↔ lamp will light as long as FUNCTION is pressed. Both sides of the tape is played repeatedly (↔ mode), and the tape are fast-forwarded to the next track if there is a blank space. To cancel the BL SKIP/↔ mode, hold down FUNCTION and then press FF. The BL SKIP/↔ lamp goes out. Both sides of the tape are played once (if you start from the reverse side (opposite to the lid), only that side will be played).

Protecting Your Hearing (AVLS)

When AVLS (Automatic Volume Limiter System) is turned on, the maximum volume is kept down to protect your ears.

 
While holding down FUNCTION, press REW. The AVLS lamp will light as long as FUNCTION is pressed. To cancel the AVLS, while holding down FUNCTION, press REW. The AVLS lamp goes out.

Notes on FUNCTION

- When FUNCTION is pressed, the LED lamp will light to show the present mode.
- When you enter a function mode, you will hear a short beep and when you cancel it, you will hear two short beeps.

Emphasizing Bass

Press SOUND. Each time you press the button, the SOUND mode changes as below.

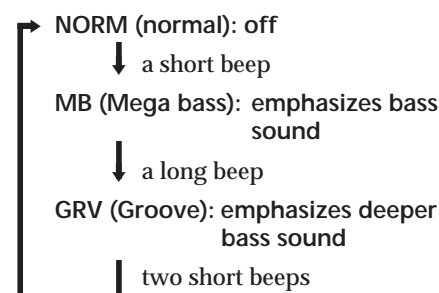

Notes

- If the sound is distorted with the mode "GRV", turn down the volume of the main unit or select other modes.
- Bass emphasis may not show great effect if the volume is turned up too high.

Locking the controls — HOLD Function

Slide the HOLD switch in the direction of the arrow to lock the controls.

Precautions

On batteries

- Do not carry dry batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- When you are not going to use your Walkman for a long time, remove the battery to prevent damage from battery leakage and corrosion.

On handling

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- Do not use cassettes longer than 90 minutes except for long continuous playback.
- If the unit has not been used for a long time, set it in the playback mode to warm it up for a few minutes before you start using again.

On the remote control

Use the supplied remote control only with this unit.

On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

 
Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume to a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

On maintenance

- Clean the tape head and tape path, using a cotton swab and commercially available cleaning solvent after every 10 hours of use.
- To clean the exterior, use a soft cloth slightly moistened in water. Do not use alcohol, benzene or thinner.
- Clean the headphones/earphones and remote control plugs periodically.

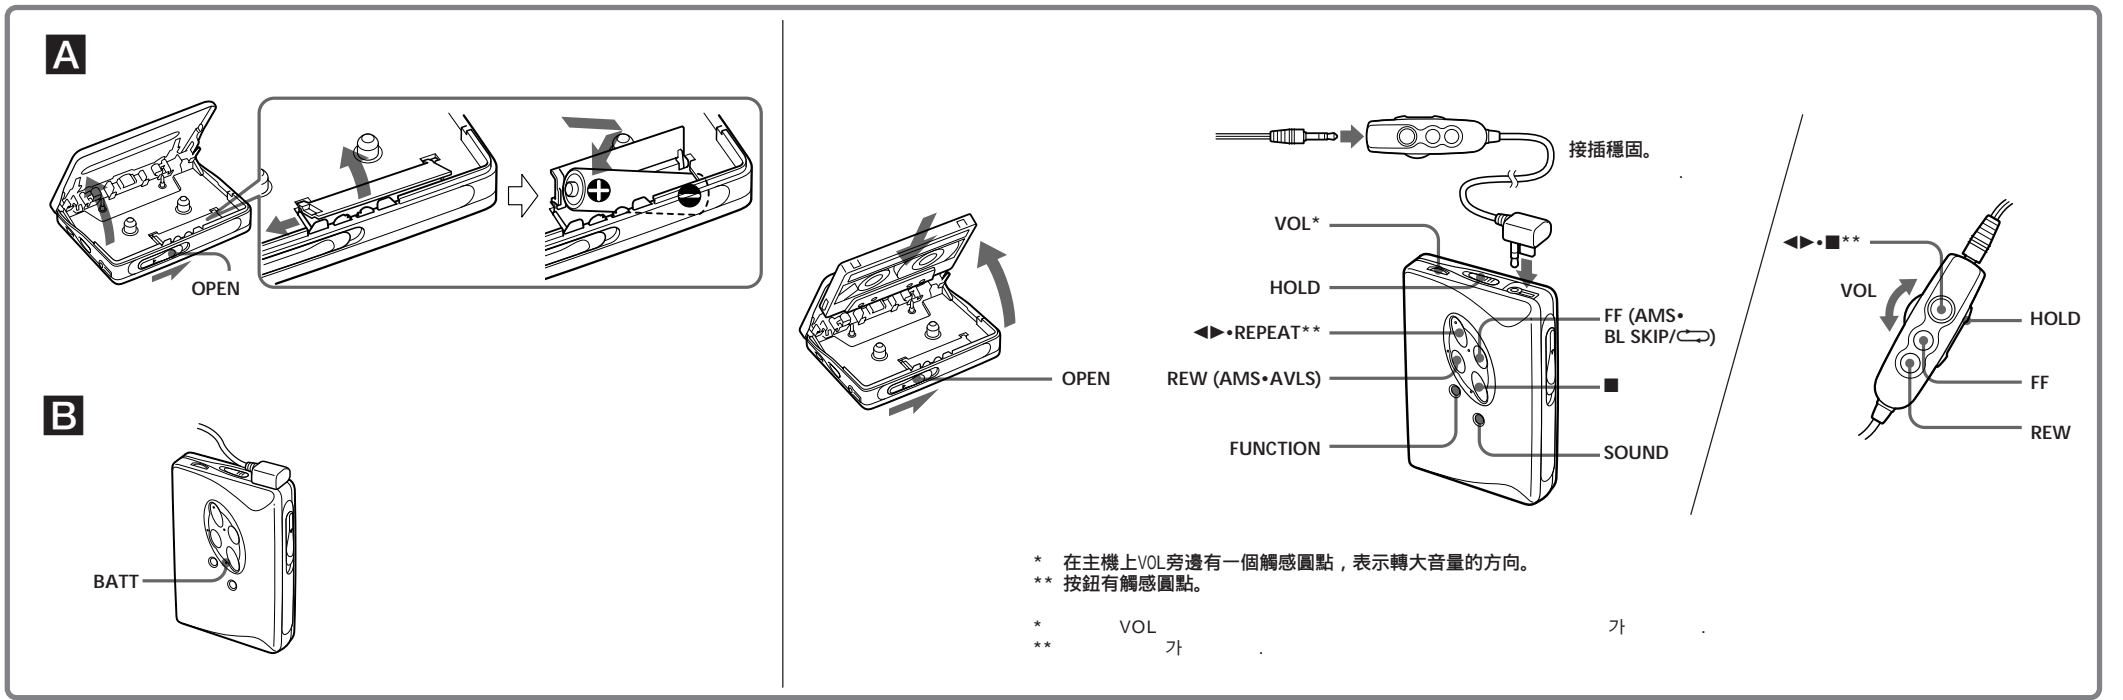

中文

使用準備

裝電池 A

- 1 滑動OPEN（啟開）開關以打開卡帶架。
- 2 釋放鎖鍵以打開電池室蓋，然後對準確電池電極地裝入一個R6（AA，3號）乾電池。

註
• 為能發揮機器的最大性能，最好請利用Sony牌鹼電池。

何時須更換電池 B

當BATT（電池）指示燈熄滅時，便請更換新電池。

註
• 更換了電池之後，FUNCTION（功能）和SOUND（聲）按鈕的設定內容都將被抹去。

播放磁帶

- 1 如果HOLD（保持）功能開著，即請相反於箭頭所指方向滑動HOLD開關以解鎖各控制器。
- 2 裝入卡帶並按主機上的◀▶•REPEAT，如果是用遙控器操作，則按◀▶（放音）•■（停止）。用VOL調整音量。

在主機上調整音量時
請把遙控器上的VOL控制設定於最大電平。

在遙控器上調整音量時
請把主機的VOL控制設定於略高於適當電平的位置。

主機上的操作

要	請按
切換播放另外一面時	在播放中，請按◀▶•REPEAT
停止播放時	■
快進繞時*	停止中，請按FF
重繞時*	停止中，請按REW
反復現在播放中曲子時（反復單曲功能）	在播放中，請按◀▶•REPEAT 1秒以上 要停止單曲反復操作時，請再按一次◀▶。

遙控器上的操作

要	請按
切換播放另一面時	播放中，請按◀▶•■ 1秒以上
停止播放時	播放中，請按一次◀▶•■
快進繞時*	停止中，請按FF
重繞時*	停止中，請按REW
反復播放現在曲子時（反復單曲功能）	播放中，按兩次◀▶•■ 要停止單曲反復功能時，請按一次◀▶•■。

其他磁帶操作

要	請按
從下一首曲 / 按下9曲的開頭播放時（AMS**）	播放中，按一次 / 反復按FF
從現在曲子 / 前面8首曲的開頭播放時（AMS**）	播放中，按一次 / 反復按REW
從另外一面的開頭播放時（跳越倒繞功能）	停止中，按FF 1秒以上
從同一面的開頭播放時（重繞自動播放功能）	停止中，按REW 1秒以上

* 在快進繞或重繞中，如果按了遙控器上的◀▶•■時，Walkman即將切換為播放磁帶。
**自動樂曲深測

使用其他功能

調整放音模式

按下FUNCTION，同時按FF按鈕。而按住FUNCTION按鈕多久，BL SKIP / ◀ 燈也隨著點亮多久。將反復播放磁帶的雙面（◀▶ 模式）。播放中遇到空白部分時，磁帶將自動地快進繞到下一首曲。
要解除BL SKIP / ◀ 模式時，請按住FUNCTION，然後按FF。BL SKIP / ◀ 燈即告熄滅。
磁帶便只播放一次雙面（如果是從倒繞面（蓋子的相反面）開始播放，便只能播放該一面就停止了）。

保護您的聽覺（AVLS）

當打開了AVLS（自動音量限制系統）時，最大音量將受限制以便保護您的耳朵。


按下FUNCTION，同時按REW。
按住FUNCTION多久，AVLS指示燈即點亮多久。
要解除AVLS功能時，請按下FUNCTION，同時按REW。AVLS指示燈將熄滅。

FUNCTION須知

- 當按了FUNCTION操作按鈕時，即將點亮發光二極管燈以表示現在的操作模式。
- 當輸入功能模式時，都可聽到一短嘟聲，當您解除功能時，裝可聽到兩短嘟聲。

加強低音

按SOUND。每次按此按鈕，SOUND（聲）模式即作如下變化。

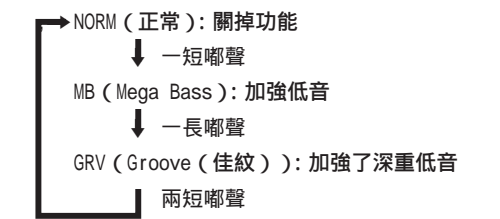

註
• “GRV”（最佳狀態）模式時，如果聲音發生失真，即請轉小主機的音量，或選擇其他模式。
• 如果把音量轉得太大，低音加強功能可能不發生太大效果。

鎖定控制器 — HOLD功能

沿箭頭所指方向滑動HOLD開關以鎖定控制器。

使用前須注意

電池須知

- 請勿將乾電池與硬幣或其他金屬小件混在一起攜帶。如果電池的正極和負極意外地接觸了金屬小件，將會發熱。
- 長期不使用Walkman時，請取出電池以避免因電池漏液而腐蝕受損。

本機須知

- 請勿將本機置於熱源附近，或受陽光直射、極多塵沙、潮濕、會淋到雨、有機械衝擊的地方，或緊閉的汽車裡。
- 請不要使用90分鐘以上長度的磁帶，除非需要長時間連續放音或錄音。
- 如果長時間未使用本機，在重新開始使用之前，請先將其置於放音狀態預熱幾分鐘。

遙控器須知

本機請限使用附帶的遙控器。

頭戴耳機 / 耳機須知

交通安全

請勿在駕車、騎車或操縱任何機動車輛時使用頭戴耳機 / 耳機，否則可能導致交通事故，有些地區是違法的。即使在步行時，特別是在過馬路時，高音量地使用頭戴耳機 / 耳機也會有潛在的危險。在可能有危險的情況下，必須減小音量或暫停使用。

防止損傷聽力

請勿高音量地使用頭戴耳機 / 耳機。耳科專家告誡不要連續、高音量和長時間使用耳機。有耳鳴經驗的人也請調低音量或不連續使用。

為他人著想

請保持適當的音量，使您能聽到外界的聲音，並不騷擾周圍的人。

維修須知

- 每使用了10個小時，即請用棉棒和市售清潔液清潔一下磁頭和磁帶通道。
- 請用軟布輕蘸濕清水擦拭機器外殼。切勿使用酒精，汽油或稀鹼劑。
- 請定期地清潔頭戴耳機 / 耳機和遙控器的插頭。

按插穩固。

VOL*
HOLD
◀▶•REPEAT**
REW (AMS•AVLS)
FUNCTION

FF (AMS•BL SKIP/◀▶)
SOUND

VOL
HOLD
FF
REW

* 在主機上VOL旁邊有一個觸感圓點，表示轉大音量的方向。
** 按鈕有觸感圓點。

* VOL 가
** 가

(AVLS)
AVLS(Automatic Volume Limiter System,)

1 OPEN
2)

R6(AA
FUNCTION
AVLS
REW
FUNCTION
LED
SOUND

1 HOLD
2)

HOLD
◀▶•REPEAT
VOL
VOL

NORM():
MB(가):
GRV():
1
1
2

• “GRV” 가
• 가 가
— HOLD

◀▶•REPEAT
■
* FF
* REW
◀▶•REPEAT 1
()
◀▶•■ 1
◀▶•■
* FF
* REW
◀▶•■
()
◀▶•■
• 10
* Walkman
** Automatic Music Sensor()

FUNCTION
FUNCTION
가
()
BL SKIP/◀▶
FF
BL SKIP/◀▶ 가
()
FUNCTION

FUNCTION
FUNCTION
가
()
BL SKIP/◀▶
FF
BL SKIP/◀▶ 가
()
FUNCTION