



For details, refer to the Operating Instructions.
詳細資訊，請參閱使用說明書。

Quick Setup Guide/快速設定指南

DAV-DZ340K/DZ640K/DZ840K/DZ940K

1 Connecting the speakers/連接揚聲器


For DAV-DZ640K/DZ840K/DZ940K, speaker assembly is necessary. Refer to the supplied "Speaker Installation Guide."

對於DAV-DZ640K/DZ840K/DZ940K，需要組裝揚聲器。請參閱提供的“揚聲器安裝指南”。

To connect speaker cords to the speaker/將揚聲器導線連接到揚聲器



Connect the cord so that the cord's color tube matches the color of the label on the rear of the speaker.

連接導線，使揚聲器背面標籤的顏色對應導線色環。

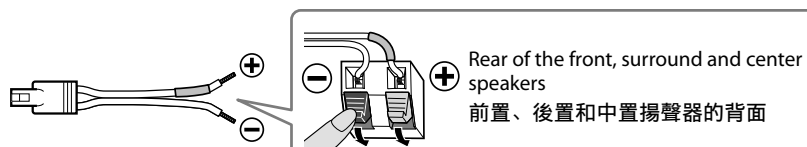

For all models, connect the speaker cords to match the color of the SPEAKERS jacks of the unit.

對於所有機型，將揚聲器導線連接到本機上對應顏色的SPEAKERS插孔。

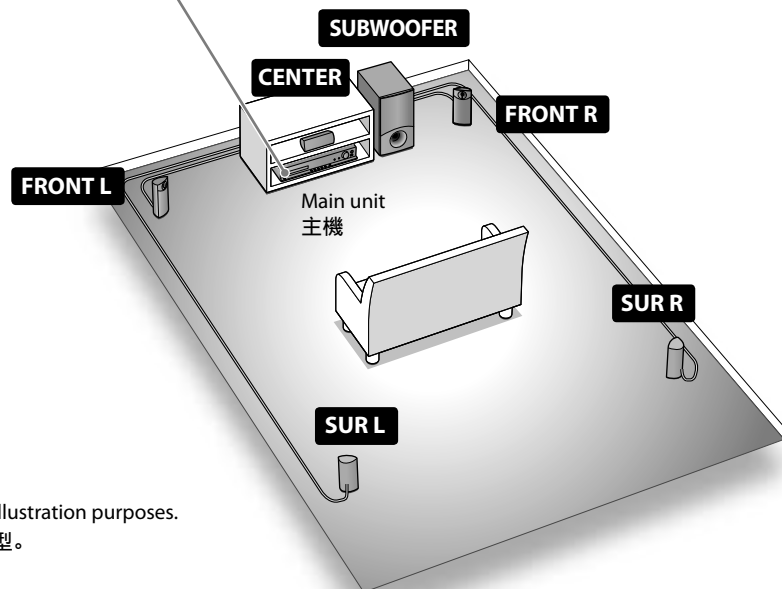
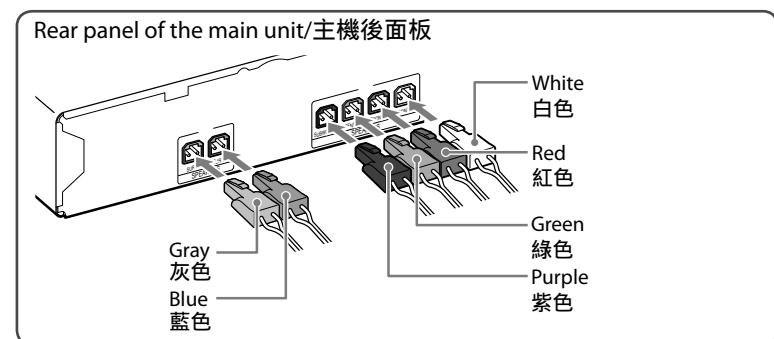


DAV-DZ340K is the model used for illustration purposes.
DAV-DZ340K 是用於圖示說明的機型。

2 Connecting your TV/set-top box/連接電視機/機上盒

Depending on the jacks on your TV or set-top box, select the video and audio connection method.
視電視機或機上盒上的插孔而定，選擇視頻和聲音連接方法。

Connecting the video to your TV/將視頻連接至電視機

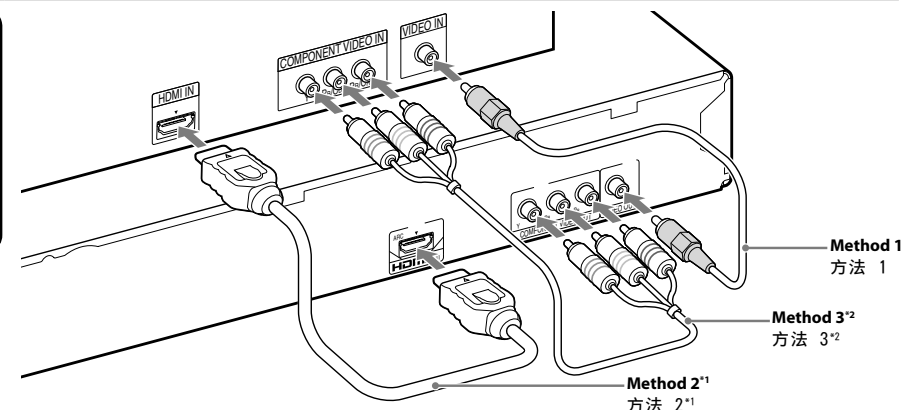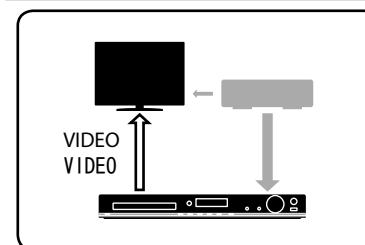

*1 The HDMI cable is supplied with certain models/in certain areas only.



*2 Not supplied. The COMPONENT VIDEO OUT jacks are available on DAV-DZ640K/DZ840K/DZ940K only.

*1 HDMI 電纜僅隨某些機型/在某些地區提供。

*2 不提供。只有DAV-DZ640K/DZ840K/DZ940K上有COMPONENT VIDEO OUT插孔。

Connecting the audio from your set-top box/連接來自機上盒的聲音

If you do not use a set-top box, refer to "Connecting your TV/set-top box" in the Operating Instructions.
如果不使用機上盒，請參閱使用說明書中的“連接電視機/機上盒”。

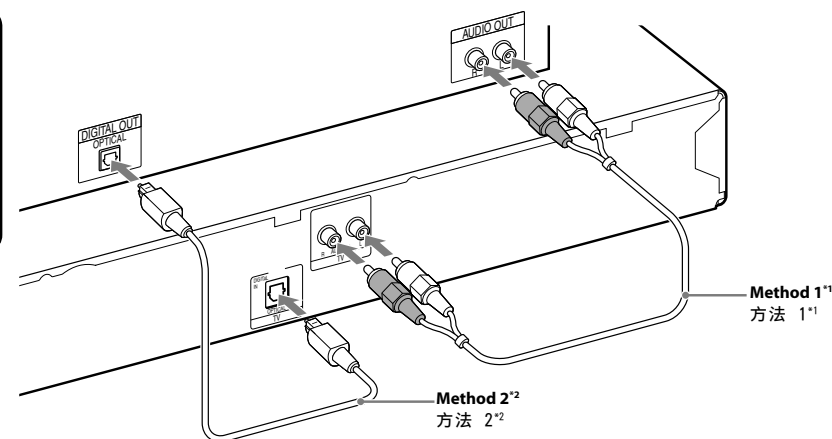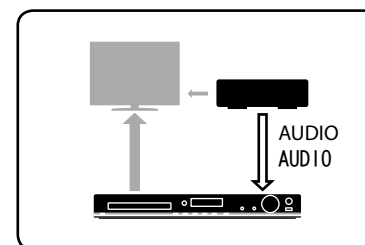

*1 Not supplied.

*2 Not supplied. The TV (DIGITAL IN OPTICAL) jack is available on DAV-DZ840K/DZ940K only.

*1 不提供。

*2 不提供。只有DAV-DZ840K/DZ940K上有TV (DIGITAL IN OPTICAL)插孔。

3 Performing the Quick Setup/執行快速設定

Note

Do not insert a disc before performing the Quick Setup.


注意

請勿於執行快速設定之前插入光碟。

1 Connect the AC power cord.



The shape of the wall outlet differs depending on the area.

連接交流電源線。
電源插座的形狀視地區而異。

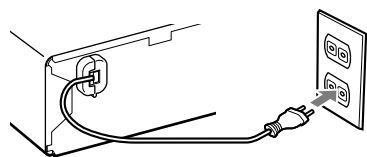

2 Turn on the power of the main unit and TV.

打開主機與電視機的電源。

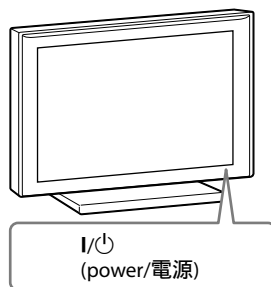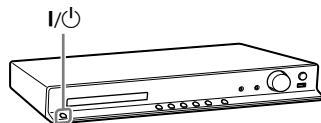


3 Switch the input selector on your TV to display "SONY Home Theatre System."

切換電視機上的輸入選擇器以顯示 "SONY Home Theatre System"。

4 Set each following item, using ←/↑/↓/→ and (+).

使用 ←/↑/↓/→ 鍵和 (+) 鍵，設定以下每個項目。


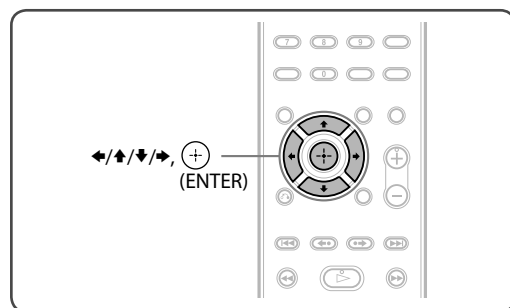


Note

Displayed items vary depending on the area.


注意

視地區而定，顯示項目會有不同。

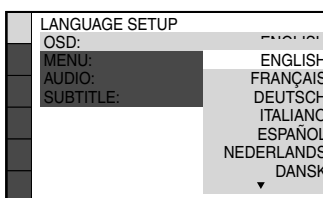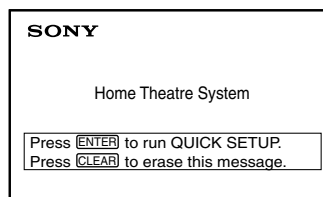


Select an on-screen language.

選擇畫面語言。

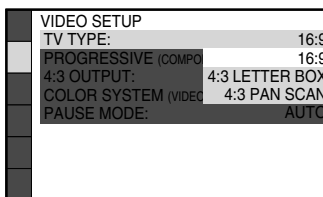


Select the aspect ratio of the connected TV.

選擇所連接電視機的縱橫比。

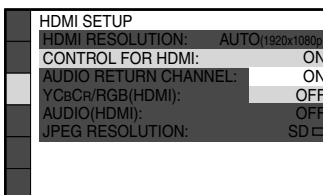

Select [ON] when you connect the main unit and the TV with an HDMI cable.

使用 HDMI 電纜連接主機與電視機時，請選擇 [ON]。

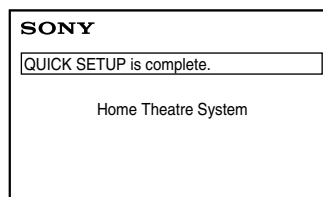

Basic setup is complete. Refer to the supplied Operating Instructions for details on how to enjoy disc playback and many other features.

基本設置完成。有關如何欣賞光碟播放和許多其他功能的詳情，請參閱提供的使用說明書。