




# CD/DVD Player


Startup Guide / Guide de démarrage / คู่มือสำหรับเริ่มต้นใช้งาน / دليل بدء التشغيل / راهنمای شروع / 시작 안내서 / 入門指南 / 入门指南

# 1

## A

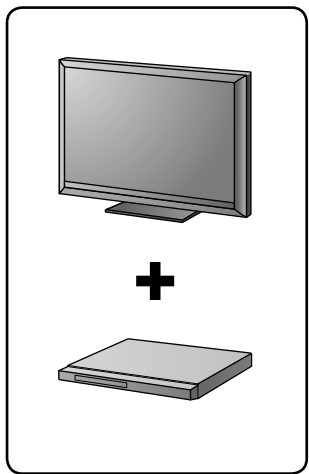


### HDMI

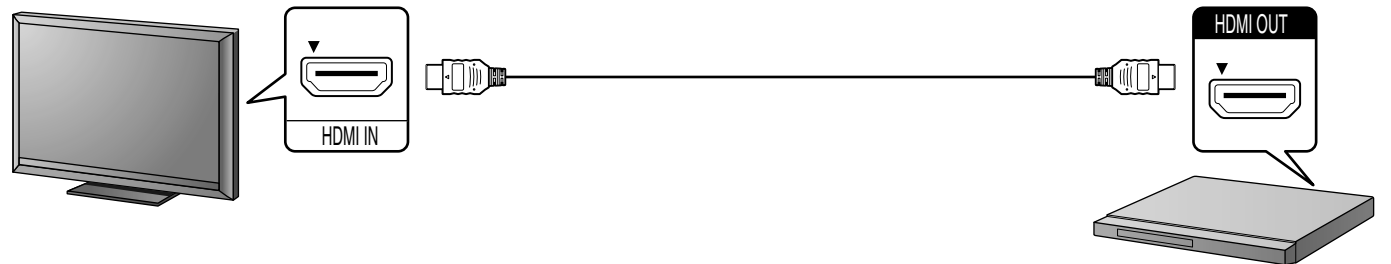


### VIDEO & AUDIO




## B

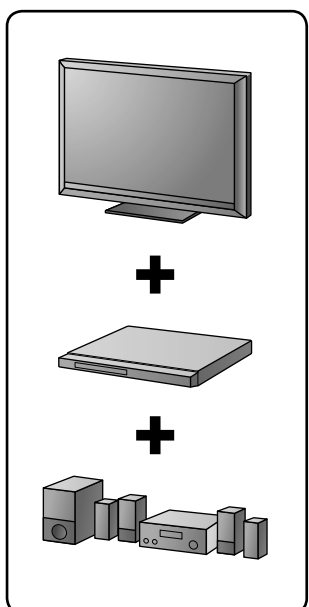

### HDMI

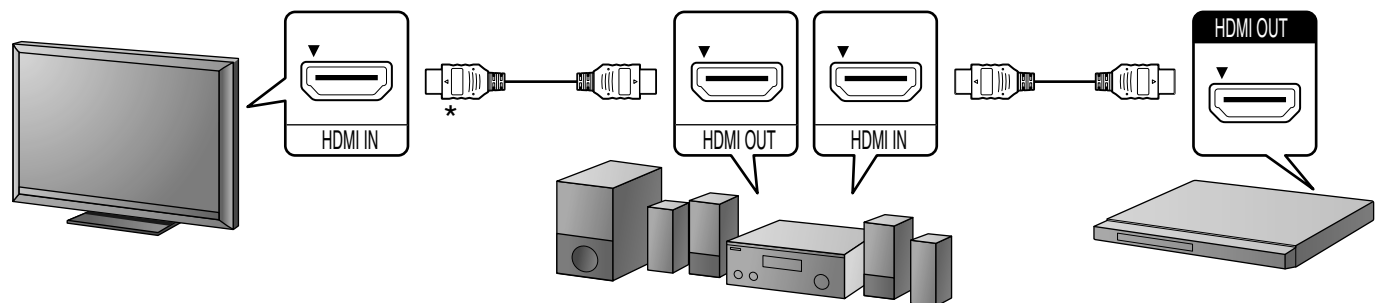


### COAXIAL

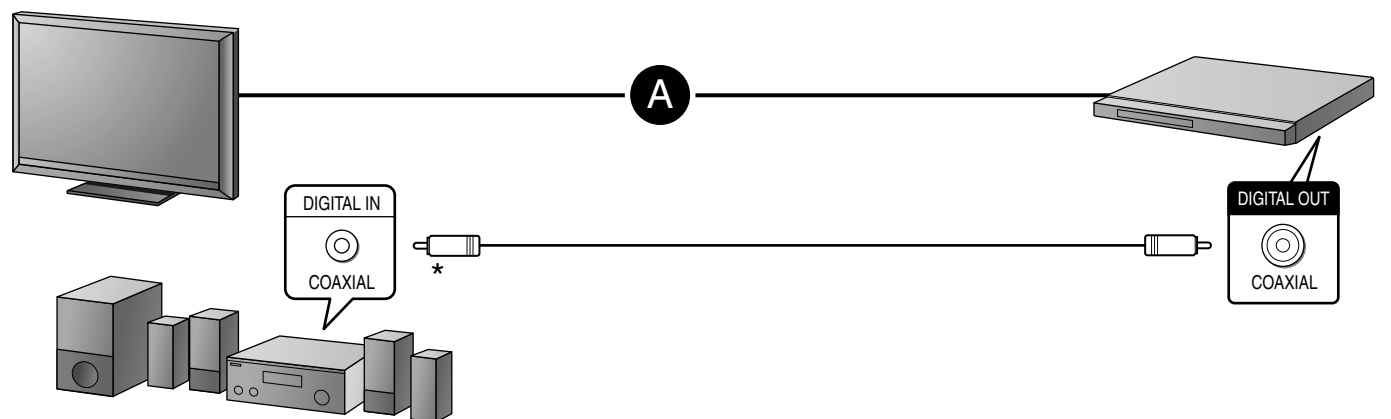


\* Not supplied / Non fourni / ไม่นำมา / غير مرفق / ضمیمه نیست / 별매품 / 未提供 / 不提供

# 2


1

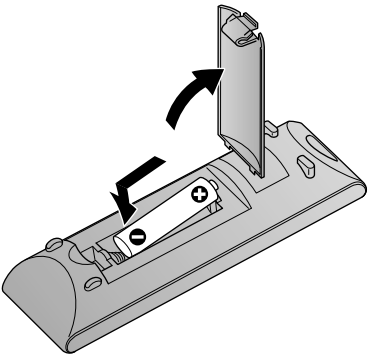


2

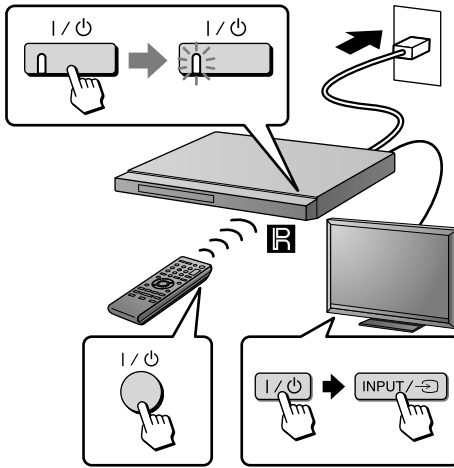

3 NTSC ↔ PAL

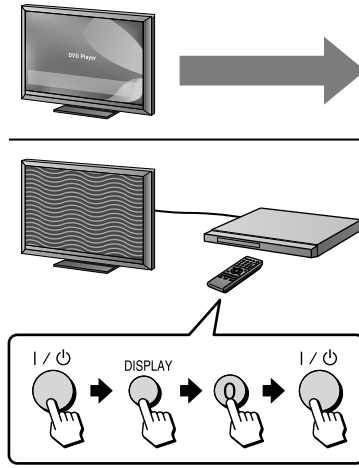


4

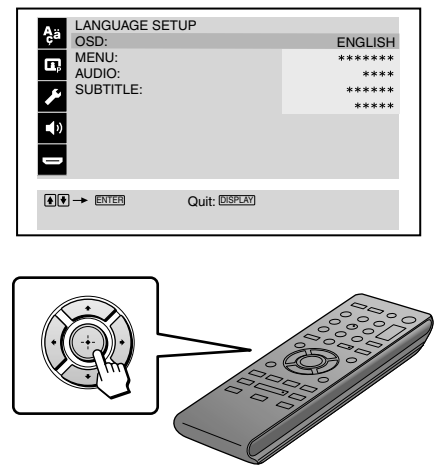

# 3

1

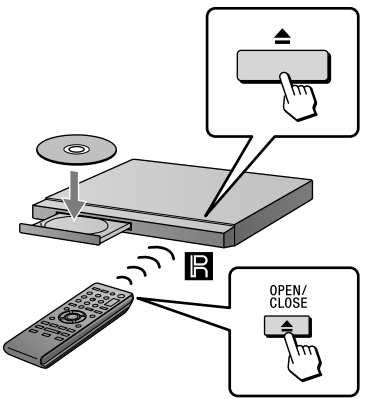

2

