



1


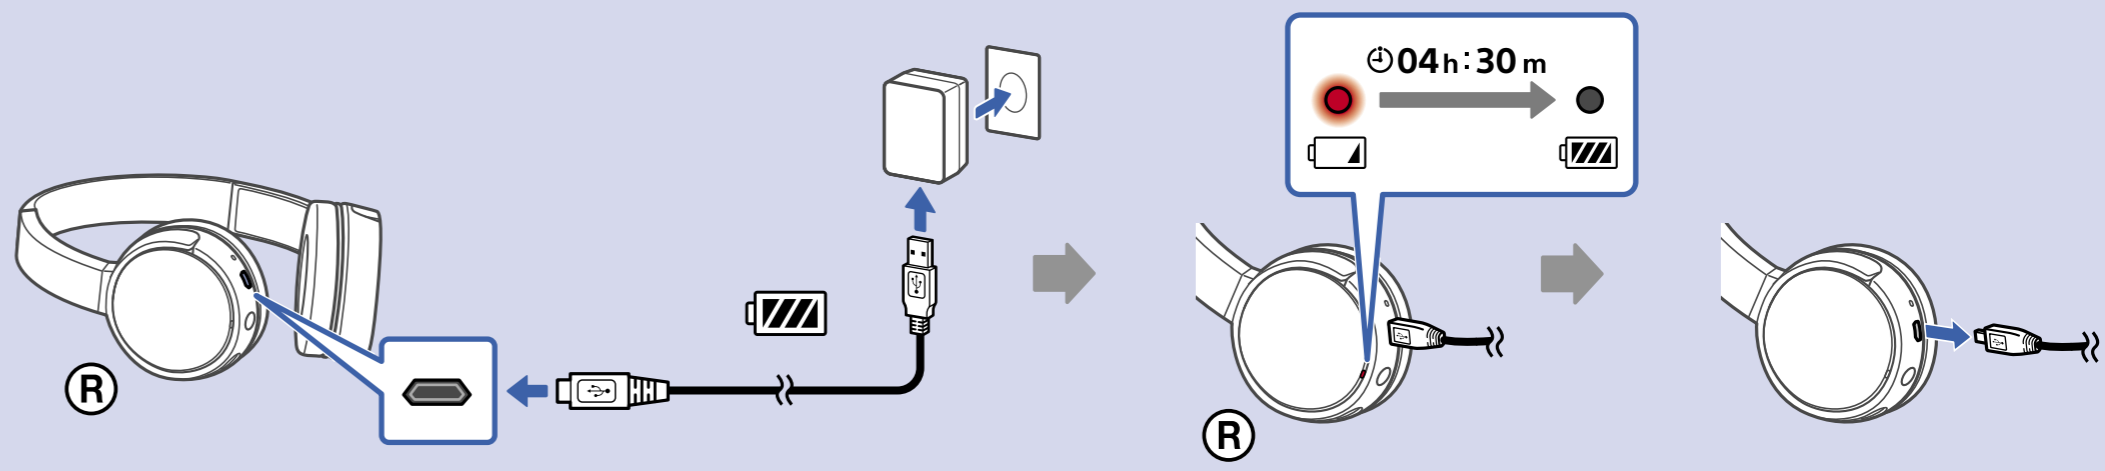


2



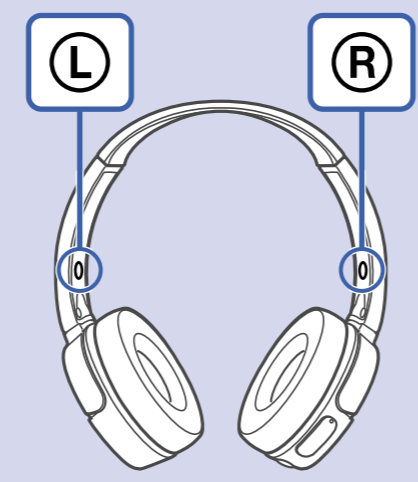


WH-CH500







D-689-100-11(1)





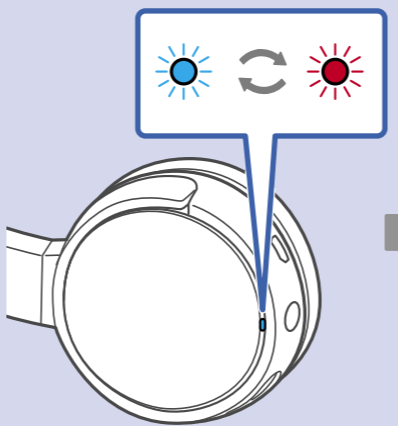
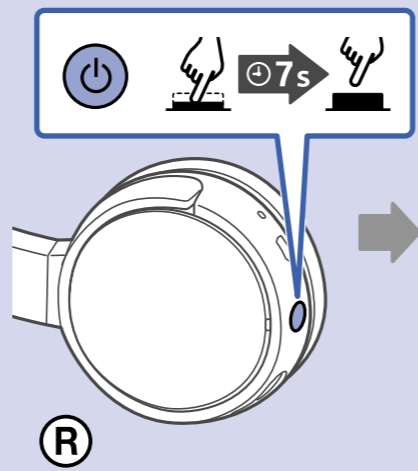


Android™ iPhone

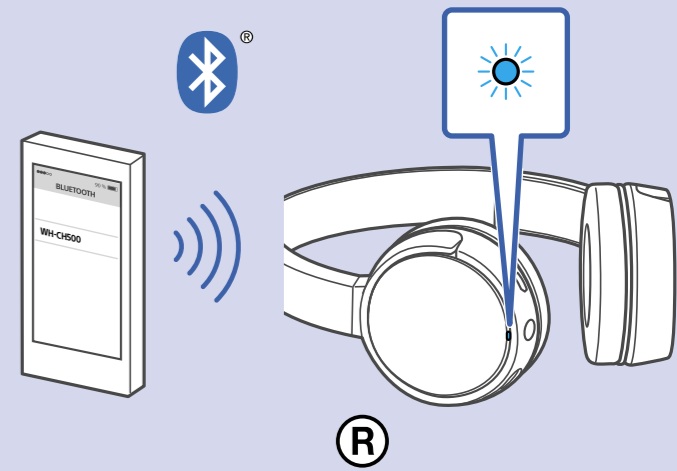
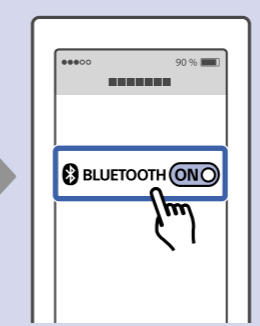
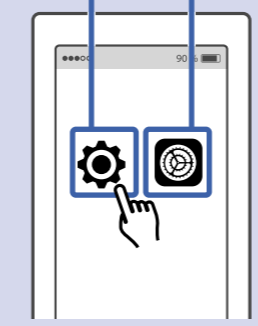


3

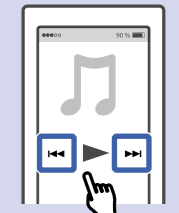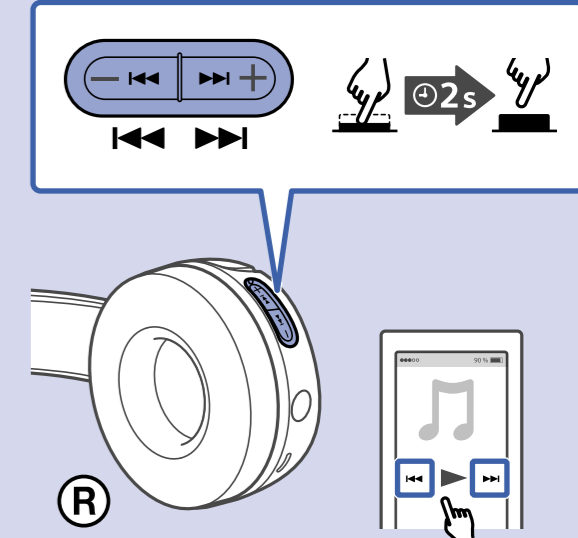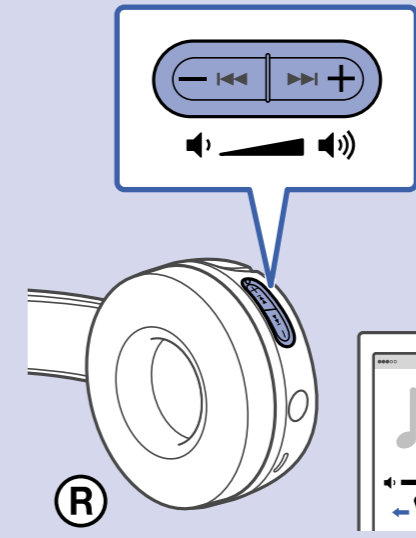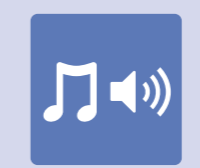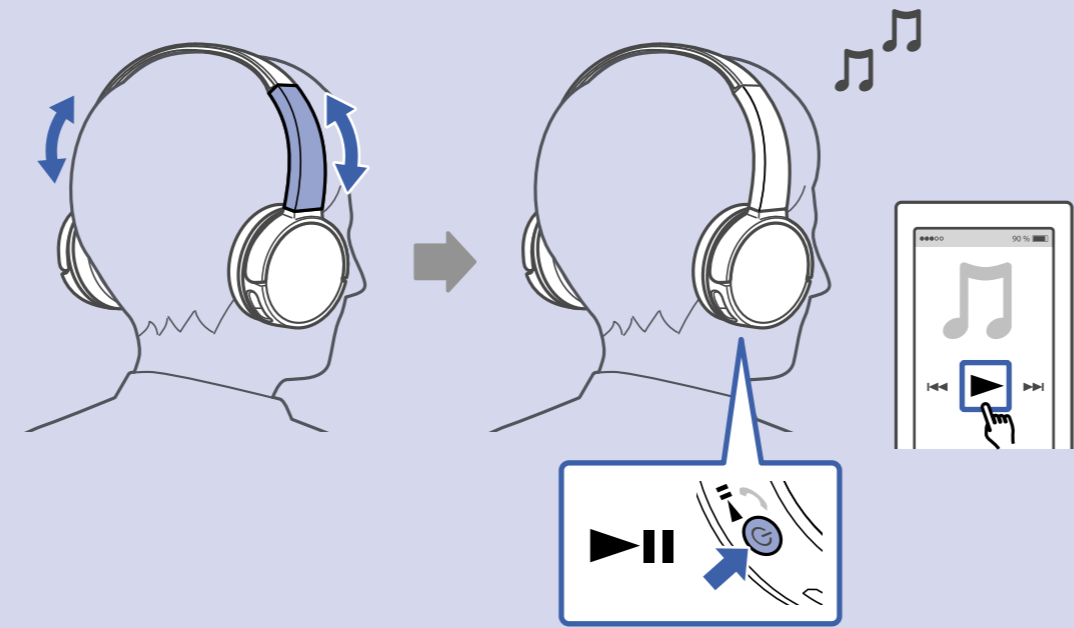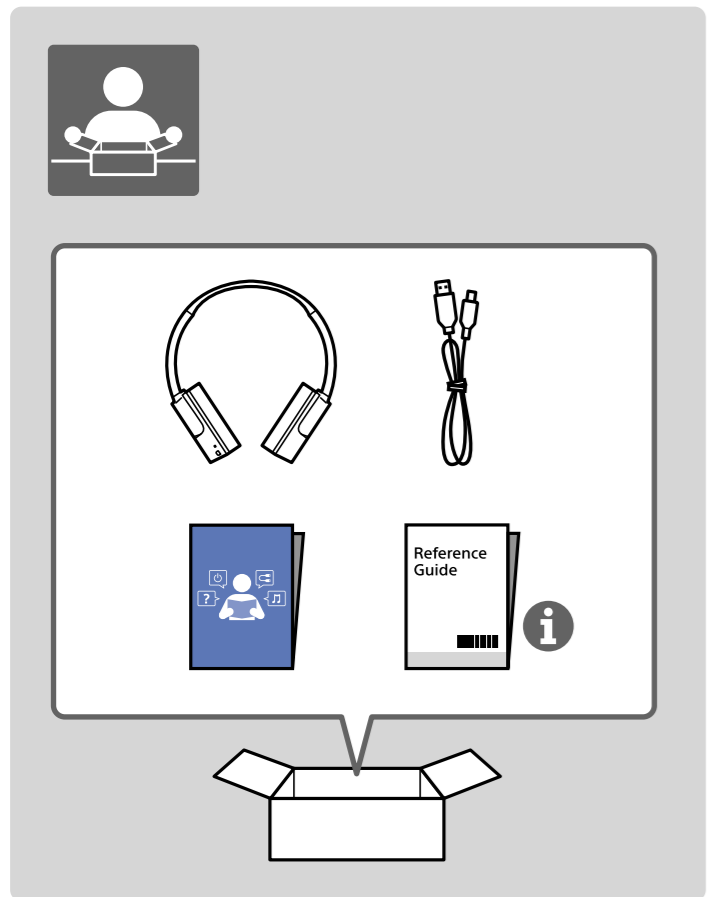

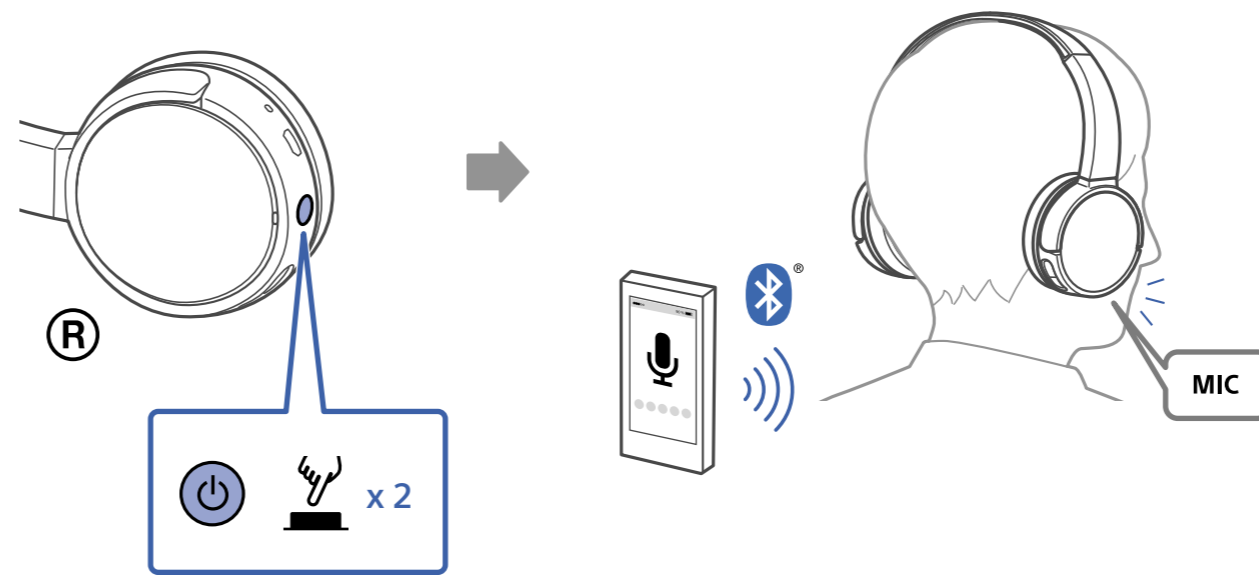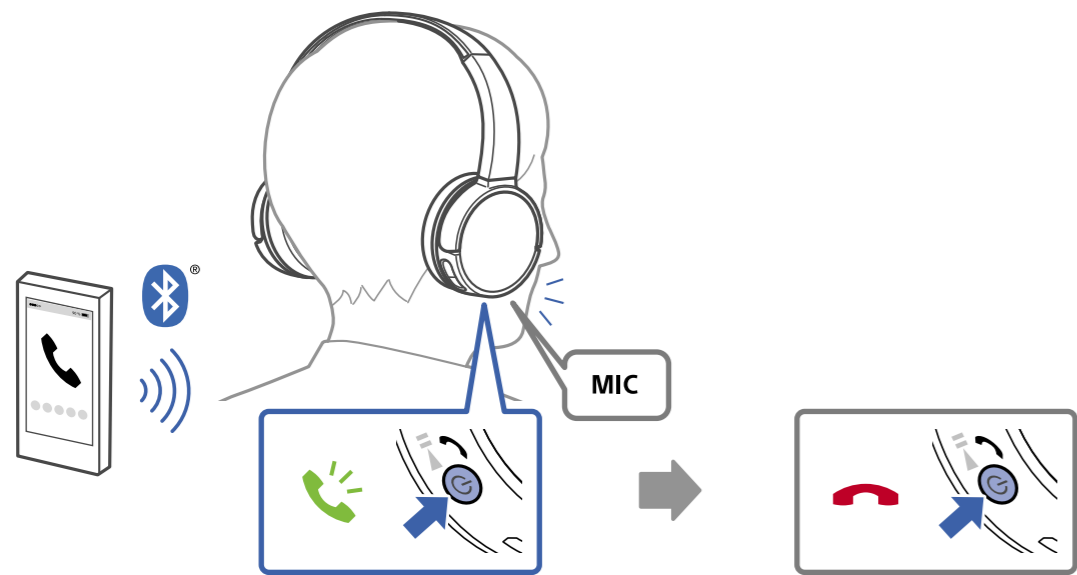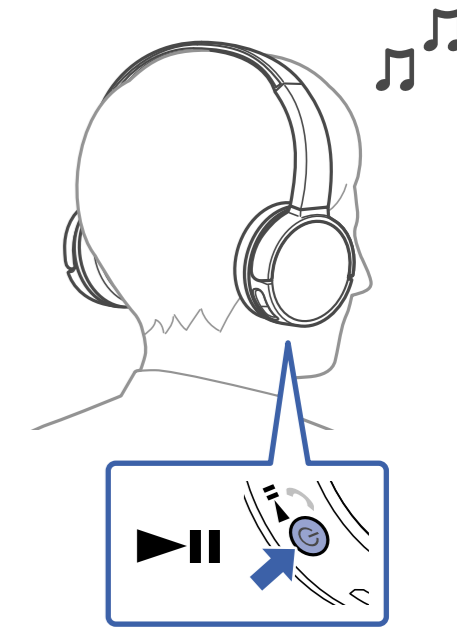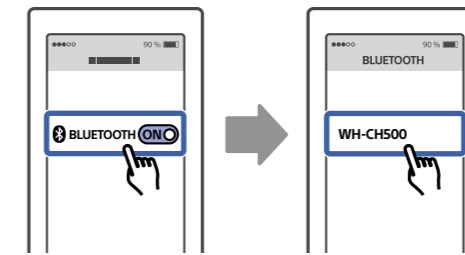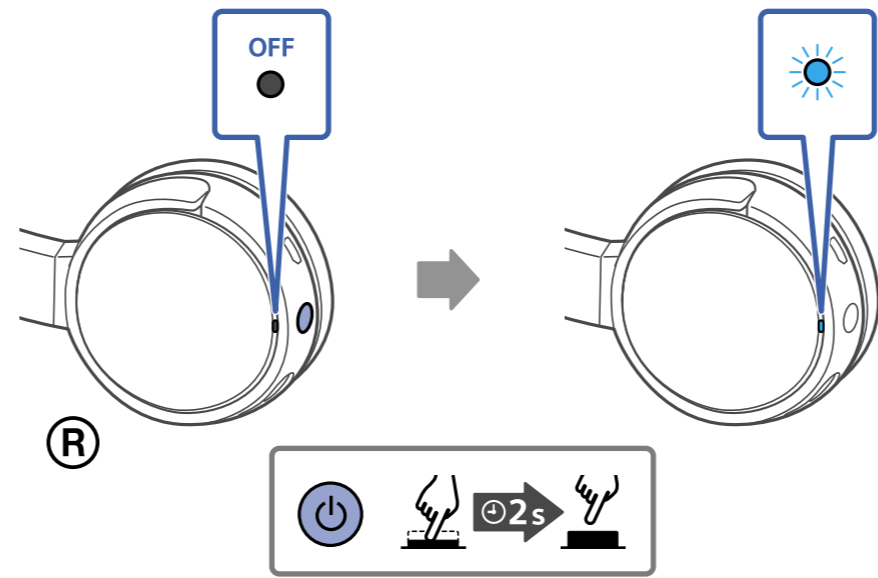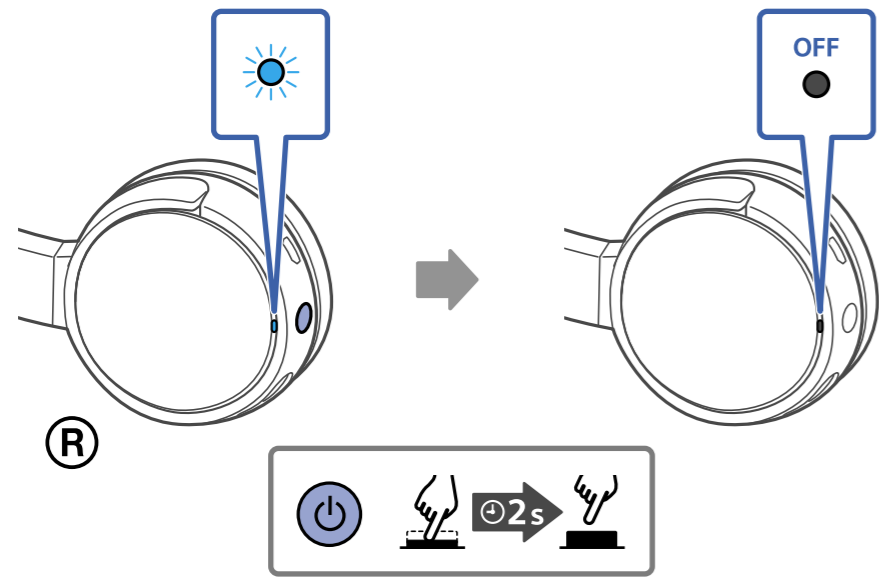

Android

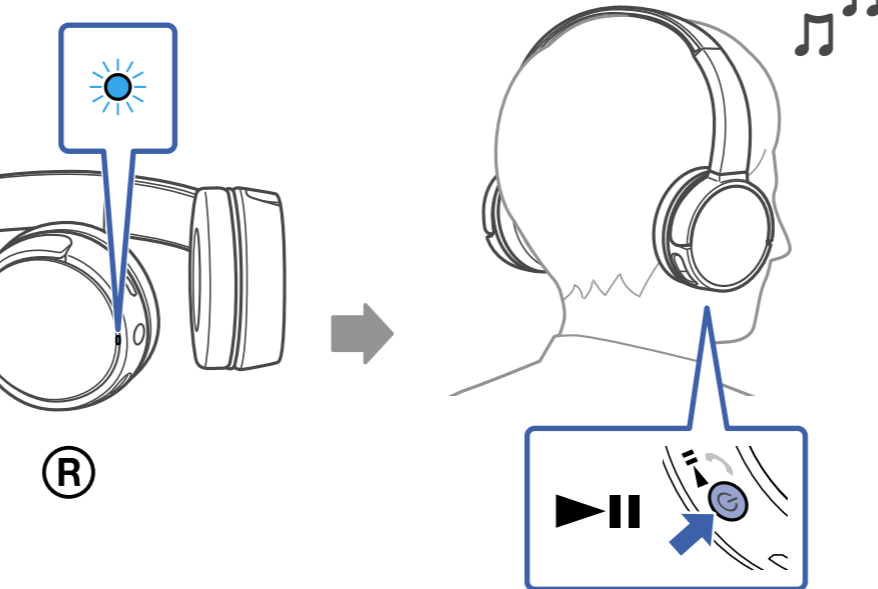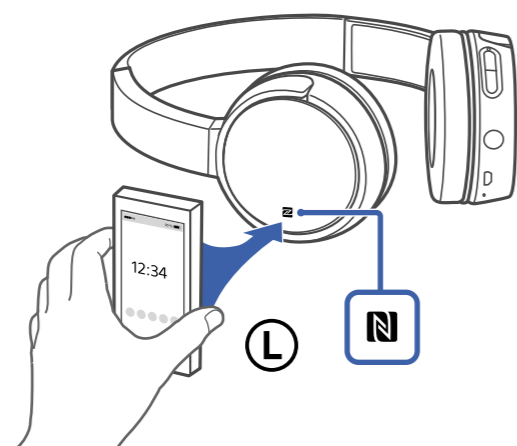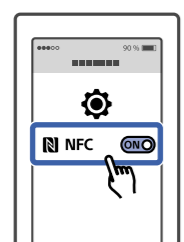

http://rd1.sony.net/help/mdr/whch500/h_zz/

