



VRD-MC3

**DVDirect™**

# Quick Start Guide

- Recording from an HDD Handycam® with the DVD BURN button
- Recording from an HDD or DVD Handycam®
- Recording from a DV camcorder
- Video recording
- Photo recording

## Recording from an HDD Handycam® with the DVD BURN button

Usable discs: DVD-R DVD-RW DVD+R

Simply press the "DVD BURN" button on your HDD Handycam and automatically transfer new video recorded since the last DVD burn.

**1**

Connect the AC adapter and AC power cord, and press to turn on the DVDDirect.

**2**

Press to insert a disc.

**3**

Turn on the HDD camcorder.

**4**

Connect the HDD camcorder and DVDDirect with a USB cable (not supplied). Press the [DVD BURN] button on the camcorder, or touch [DVD BURN] on the camcorder's LCD screen.

**5**

The DVDDirect starts recording and controls the HDD camcorder automatically.

**6**

Recording is completed automatically. Press to eject the disc.

## Recording from an HDD or DVD Handycam®

Usable discs: DVD-R DVD-RW DVD+R

Record the entire video contents of your HDD or DVD Handycam (8-cm DVD disc) onto a DVD disc.

**1**

Connect the AC adapter and AC power cord, and press to turn on the DVDDirect.

**2**

Press to insert a disc.

**3**

Turn on the HDD or DVD camcorder, and switch to PLAY/EDIT mode. [DVD camcorder] Be sure to insert the 8-cm DVD disc containing the video into the camcorder.

**4**

Connect the camcorder and DVDDirect with a USB cable (not supplied). [HDD camcorder] Touch [HDD] on the camcorder's LCD screen. [DVD camcorder] Touch [] COMPUTER on the camcorder's LCD screen. Preparation for USB connection may differ depending on your camcorder. Refer to the operating instructions for your camcorder.

**5**

Press until [Full] appears in the DVDDirect's display window.

**6**

Press to start recording. The DVDDirect controls the camcorder for the whole process.

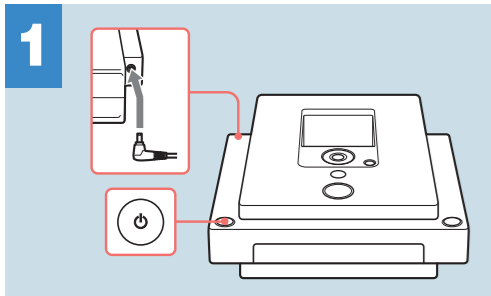

**7**

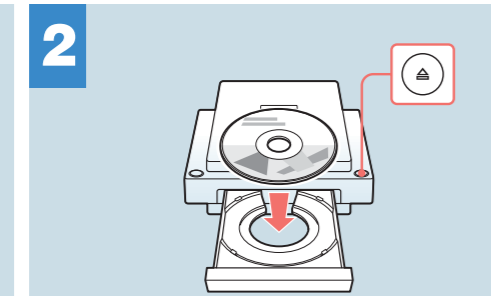
 
The DVDDirect ejects the disc automatically after recording is completed.

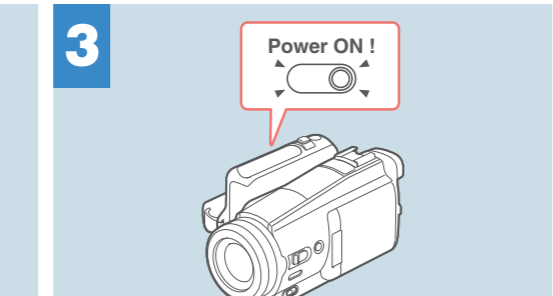
# Recording from a DV camcorder

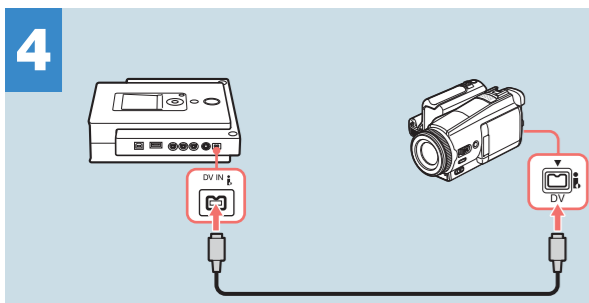
Usable discs: DVD-R DVD-RW DVD+R(DL) DVD+R DVD+RW

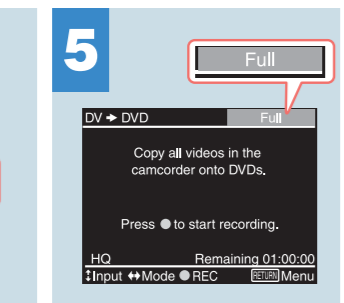


Record the entire video contents of your DV camcorder (DV tape) onto a DVD disc.



**1**  Connect the AC adapter and AC power cord, and press  to turn on the DVDDirect.

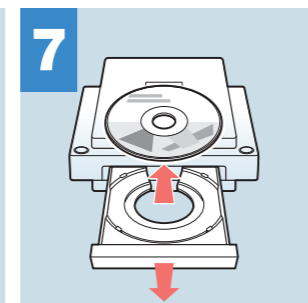
**2**  Press  to insert a disc.

**3**  Turn on the DV camcorder, and switch to PLAY/EDIT mode. Be sure to insert the DV tape.

**4**  Connect the DV camcorder and DVDDirect with a DV cable (not supplied).

**5**  Press  or  until [Full] appears on the DVDDirect's display window.

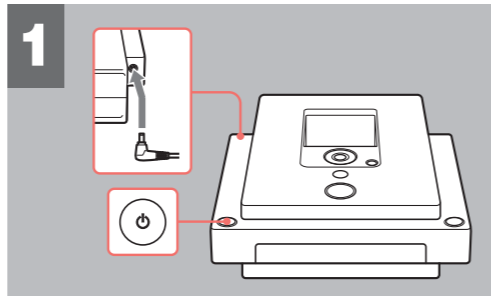

**6**  Press  to start recording. The DVDDirect controls the DV camcorder for the whole process.

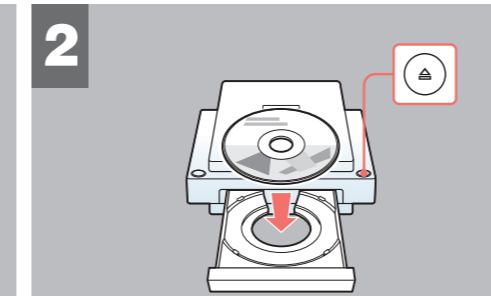
 
**7**  The DVDDirect ejects the disc automatically after recording is completed.

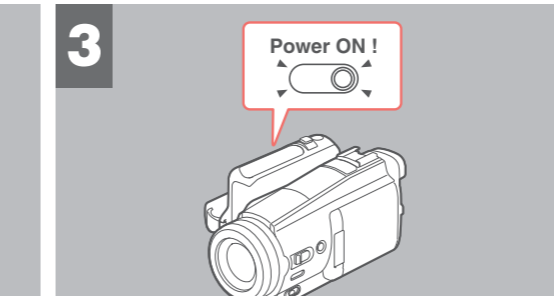
# Video recording

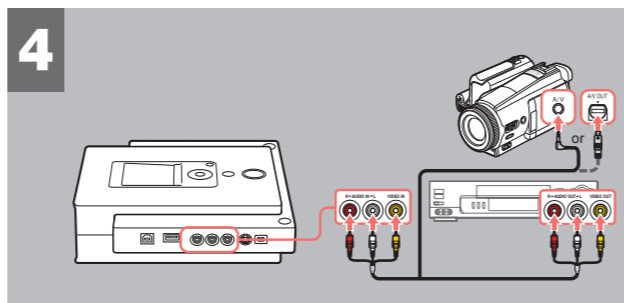
Usable discs: DVD-R DVD-RW DVD+R(DL) DVD+R DVD+RW

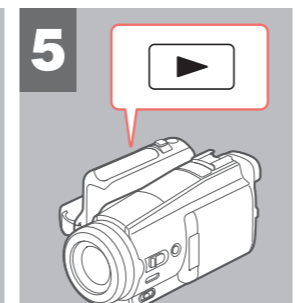
Record selected portions of a video tape onto a DVD disc.

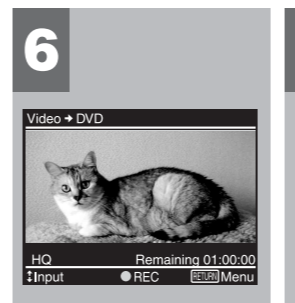

**1**  Connect the AC adapter and AC power cord, and press  to turn on the DVDDirect.




**2**  Press  to insert a disc.

**3**  Turn on and setup your camcorder or video device for video playback.

**4**  Connect the device and DVDDirect with the appropriate cable (not supplied).

**5**  Operate the video device to start playback.

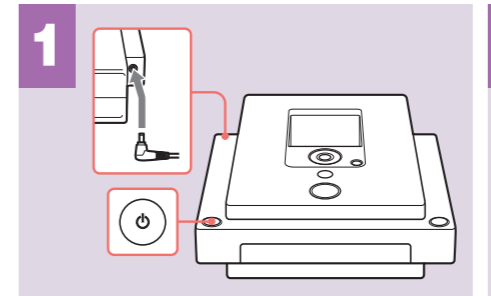

**6**  Press  to start recording.

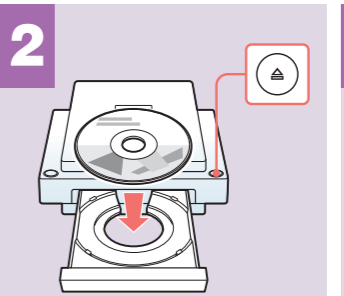

**7**  Press  to stop recording, and press  to eject the disc.

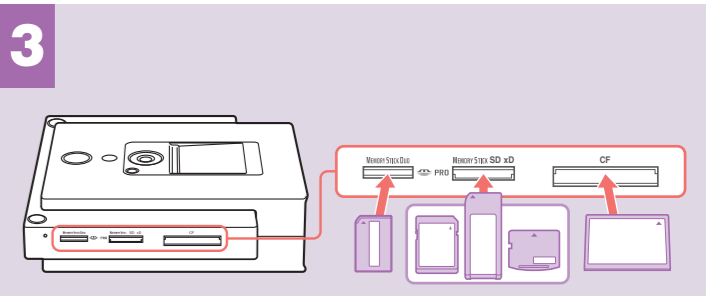

# Photo recording






Usable discs: DVD-R DVD-RW DVD+R DVD+RW

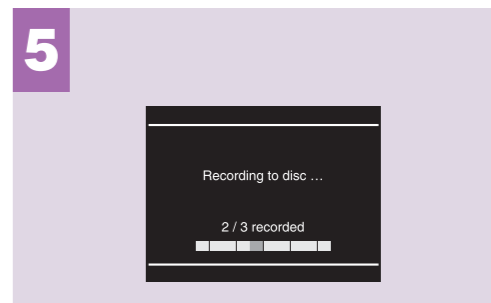

Create a photo DVD by recording directly from a memory card.

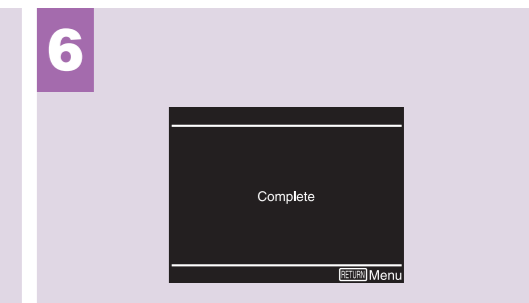

**1**  Connect the AC adapter and AC power cord, and press  to turn on the DVDDirect.

**2**  Press  to insert a disc.

**3**  Insert a memory card into the DVDDirect.  Insert only one memory card into a memory card slot.

**4**  Select (to record) or clear (to not record) photos by pressing  or  and .  All photos in the memory card are automatically selected as default.

**5**  Press  to start recording.

**6**  Recording is completed automatically. Press  to eject the disc.